

1 Materials of Construction

VC = PVC Housing, FKM Seats and Seals, Titanium Separation Pin
VE = PVC Housing, EPDM Seats and Seals, Hastelloy C276 Separation Pin
VCH = PVC Housing, FKM Seats and Seals, Hastelloy C276 Separation Pin

2 Connection


7 = 3/8" OD x 1/4" ID

Installation:

Auto Degassing Valve

- 1. Remove the entire discharge assembly of the pump (MAVV, Lock nut, Valve Housing, Valve Guides, Seats and Seals) from the pump head.
- 2. Install the new Lock Nut (64), Valve housing (63), Spacer (59), two Gaskets (14) and O-ring (17) of the ADV into the pump head.
- 3. Use the Lock Nut to secure the Auto Degassing Valve Body onto the Valve Housing with P7 O-ring (65) in between.
- 4. The entire discharge assembly from the pump is then reinstalled on top of the ADV.
- 5. Reconnect tubing and add tubing to the ADV back to the supply tank.



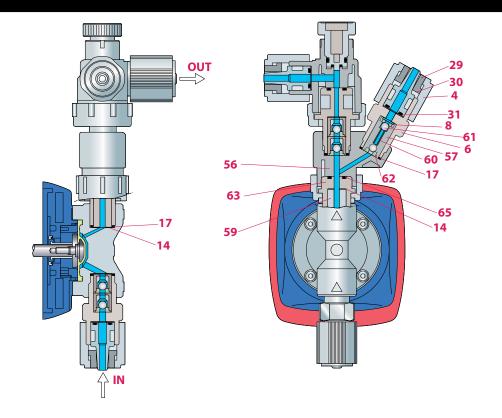

#	Part Name	VC	VE	
4	Coupling Nut	PVC		
14	Valve Gasket	PTFE		
17	O-Ring, S14	FKM	EPDM	
29	Tubing, Clamp	PPS		
30	Tubing, Adapter	PVC		
31	O-Ring, P9	FKM	EPDM	
56	Body, ADV	PVC		
57	Guide, Separation ADV	PVC		
58	Top Disc, Guide	PVC		
59	Spacer	PVC		
60	Separation Pin	Titanium	Hastelloy C276	
61	Valve Ball	Alumina Ceramic		
62	Valve Seat	FKM	EPDM	
63	Valve Housing	PVC		
65	O-Ring, P7	FKM	EPDM	
66	Valve Housing, ADV	P	PVC	

See Exploded views on www.walchem.com for part numbers