



**CAUTION: There are live circuits inside the controller even when the power switch is in the OFF position! Servicing and troubleshooting the controller must be performed by Qualified Service Personnel.**



# **WM1, WIND, W100, W600, W900: ORP Sensor Troubleshooting Guide (Electrode and Housing)**

Table of Contents

Section 1: Sensor (Electrode) Responds Slowly .....2

Section 2: Sensor Reading is Stuck on one Value .....3

Section 3: Sensor Reads Low or High Versus a Calibrated Handheld Meter; Cannot Calibrate ....4

Section 4: Sensor Error .....5

Section 5: ORP Reading is Unstable .....7



**CAUTION: There are live circuits inside the controller even when the power switch is in the OFF position! Servicing and troubleshooting the controller must be performed by Qualified Service Personnel.**



## **Section 1: Sensor (Electrode) Responds Slowly**

### **Step 1:**

The pH or ORP electrodes require periodic cleaning and calibration. These electrodes are like batteries and their voltage outputs will change with time even if they are not being used.

- The method of cleaning the electrode will depend upon the coating, as well as the materials of construction of the electrode. Do not use a solvent that will attack the electrode
- Oily coatings should be removed with a mild detergent or isopropyl alcohol.
- Hard scales such as calcium carbonate can usually be removed with a dilute hydrochloric acid solution.
- Soft coatings can be removed using a soft cloth or soft toothbrush.
- A two point calibration should always be performed after cleaning the electrode.

### **Step 2:**

If cleaning does not speed up the electrode's response

- Replace the electrode.





**CAUTION: There are live circuits inside the controller even when the power switch is in the OFF position! Servicing and troubleshooting the controller must be performed by Qualified Service Personnel.**



## **Section 2: Sensor Reading is Stuck on one Value**

### **Step 1:**

- If the sensor reading is stuck on one number
- If it is stuck near 0 mV then there is most likely an electrical short.
- If it is stuck at a high mV reading (~1200), then the pre-amp circuit is most likely open.
- Broken glass on the electrode tip could cause an open circuit which sends the signal drifting to the end, or lower, or all the way to Sensor Error.

Note: If water leaks into the preamp, you may get a mV reading, but the reading will not hold accuracy.

### **Step 2:**


Check the sensor (electrode) for an electrical short.

- Power down the controller.
- Remove/unthread the electrode from the housing.
- Power the controller up.
- If reading drifts then the electrode has a short. Replace the electrode. If the reading is still stuck on one number, proceed to **Step 3**.

### **Step 3:**

Check the preamp (housing) for an electrical short.

- Power down the controller.
- Disconnect the preamp from the controller.
- Power the controller up.
- If reading drifts then the preamp has a short. Replace the preamp. If the reading is stuck on one number, proceed to Section 4.

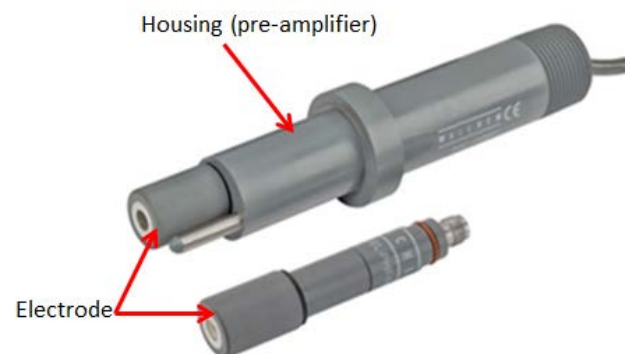



**CAUTION: There are live circuits inside the controller even when the power switch is in the OFF position! Servicing and troubleshooting the controller must be performed by Qualified Service Personnel.**




### **Section 3: Sensor Reads Low or High Versus a Calibrated Handheld Meter; Cannot Calibrate**

#### **Step 1:**

Perform a sensor calibration in accordance with the controller manual.

- If the sensor cannot be calibrated, first thing to try is clean the sensor.
- If the sensor cannot be calibrated after cleaning, proceed to **Step 2**.

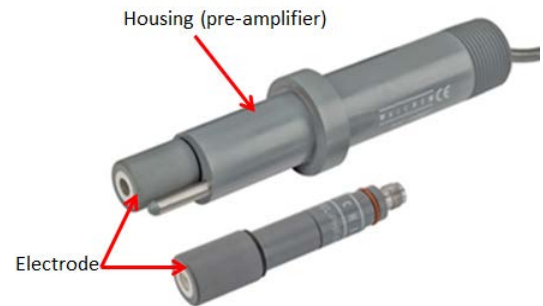

#### **Step 2:**

Go to the **Sensor mV menu. Resetting the calibration settings.**

- Go into the Sensor menu, go to Sensor Type, change it from ORP to pH, hit ENTER to save this change. Go back into the Sensor Type menu, change it from pH back to ORP, hit ENTER to save this change.
- Try to calibrate the sensor in accordance with the controller manual. If you still cannot calibrate, proceed to **Step 3**.

#### **Step 3:**

Go to the **Sensor mV menu. Resetting to factory defaults.**

- Proceed as follows depending on which controller model you have.
- For a WM1 or WIND controller, go into the Sensor Input menu, and press the reset defaults button. Proceed to **Section 4**.
- For a WPH400 controller reset the controller to factory defaults as follows.
  - Caution: Resetting defaults erases any user defined settings programmed into the controller.
  - Power down the controller, press and hold the ENTER and EXIT keys, power up the controller keeping the ENTER and EXIT keys pressed in until the controller boots up.
  - When the display comes up, you will be asked if you want to reset defaults, release the ENTER and EXIT keys and then press ENTER for yes. Re-check the mV and pH values. If the pH and mV values do not correlate, then either the preamp or the electrode is faulty. Proceed to **Section 4**.



**CAUTION: There are live circuits inside the controller even when the power switch is in the OFF position! Servicing and troubleshooting the controller must be performed by Qualified Service Personnel.**




## Section 4: Sensor Error

### Step 1:

Perform a self-test for this sensor input.


- If the self-test passes, then the problem is not inside the controller. The preamp or electrode is faulty. Continue to **Step 2**.
- If the self-test fails, disconnect sensor from the controller and repeat the self-test and if it still fails, send the controller back for repair. Contact your distributor or Walchem Customer Service with the controller model number and serial number to initiate the Return Authorization process.

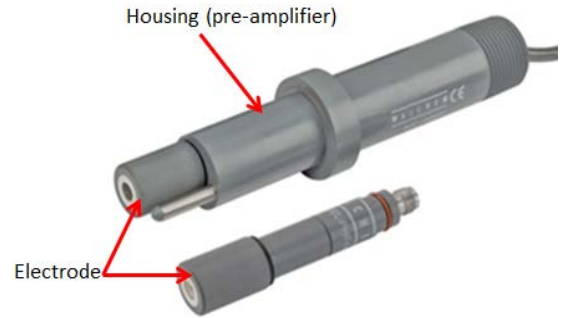

### Step 2:

On the ORP sensor input terminals inside the controller, using a multimeter:

- Measure the VDC across IN- and +5V, should read +5 VDC +/- 5%
- Measure the VDC across IN- and -5 VDC, should read -4.6 VDC +/- 5%.
- If these measurements are out of spec with and without the preamp connected, the controller is faulty. Contact your distributor or Walchem Customer Service with the controller model number and serial number to initiate the Return Authorization process.
- If these measurements are in spec without the preamp connected, then replace the preamp. If these measurements are in spec with and without the preamp, then continue to **Step 3**.

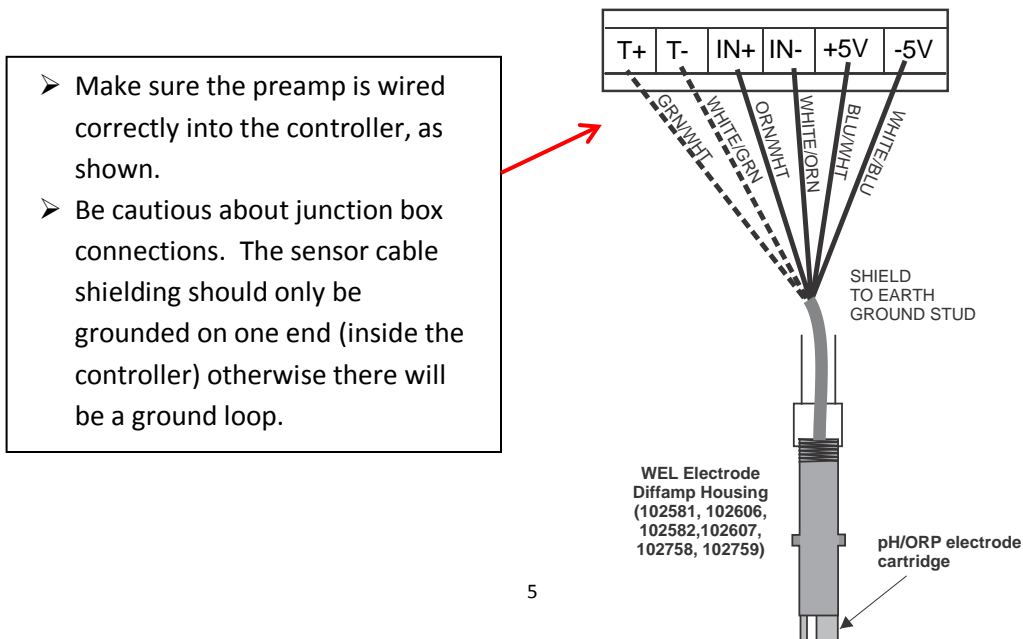



**CAUTION: There are live circuits inside the controller even when the power switch is in the OFF position! Servicing and troubleshooting the controller must be performed by Qualified Service Personnel.**



### **Step 3:**

Check the sensor cable, sensor extension cable (if installed).

- Make sure you are using shielded sensor cable, 3 twisted pair wire. Use Walchem p/n 102535 or Belden 9680.
- Make sure the sensor cable is not run near, or in the same conduit as AC voltage wire (All wires carry voltage. We are concerned with adjacent wires that are carrying voltage above 24 VAC). If you suspect the sensor cable may be the problem, then take the existing sensor (with the 5 or 20 feet of cable), and wire it directly into the controller by-passing the sensor extension cable. If the sensor reading gets corrected, then the sensor extension cable, or where it was routed, was the problem.
- If wiring the sensor cable directly into the controller does not solve the issue, then replace the preamp.



**CAUTION: There are live circuits inside the controller even when the power switch is in the OFF position! Servicing and troubleshooting the controller must be performed by Qualified Service Personnel.**




## **Section 5: ORP Reading is Unstable**

### **Step 1:**

The ORP reading is unstable when the the ORP sensor is placed in the system water.

- Remove the ORP sensor from the system water and place it in a beaker of water. Does the reading stabilize? If yes, then proceed to **Step 2**. If no, proceed to **Step 3**.

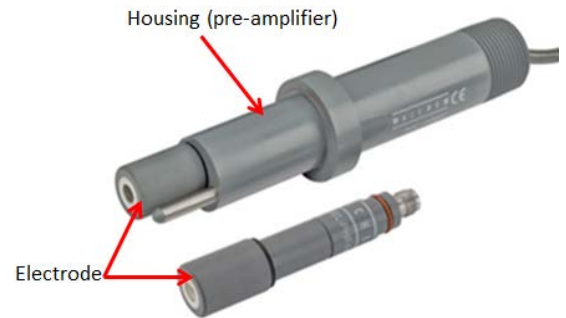

### **Step 2:**

The sensor is still in the beaker, and the reading is stable.

- Obtain a length of wire (the ends of the wire must be striped) long enough to place one end in the water in the beaker, and the other end in the system water.
- With this length of wire connecting the beaker water to the system water, does the reading stay stable?
- If the reading does not stay stable, this can indicate a ground loop. A ground loop could cause readings to be stuck at a high or low value. Or there is some electrical interference in the system water, possibly from a mixer or recirculation pump(s).

### **Step 3:**

The sensor is still in the beaker, and the reading is still unstable.

- Power down the controller, disconnect the ORP sensor shield wire from the Earth ground stud inside the controller.
- Does the reading stabilize?
- If the reading stabilizes, then there is possibly some electrical noise coming in through the controller VAC mains.
- If the reading does not stay stable, then connect the controller to an alternate supply voltage circuit. This may necessitate temporarily running an extension cord for this test. If the reading still does not stay stable, please contact Walchem for further instructions.