





Connecting to WebMaster/WIND/WebAlert via Direct Ethernet, Windows 10

From the Start, click on Settings:

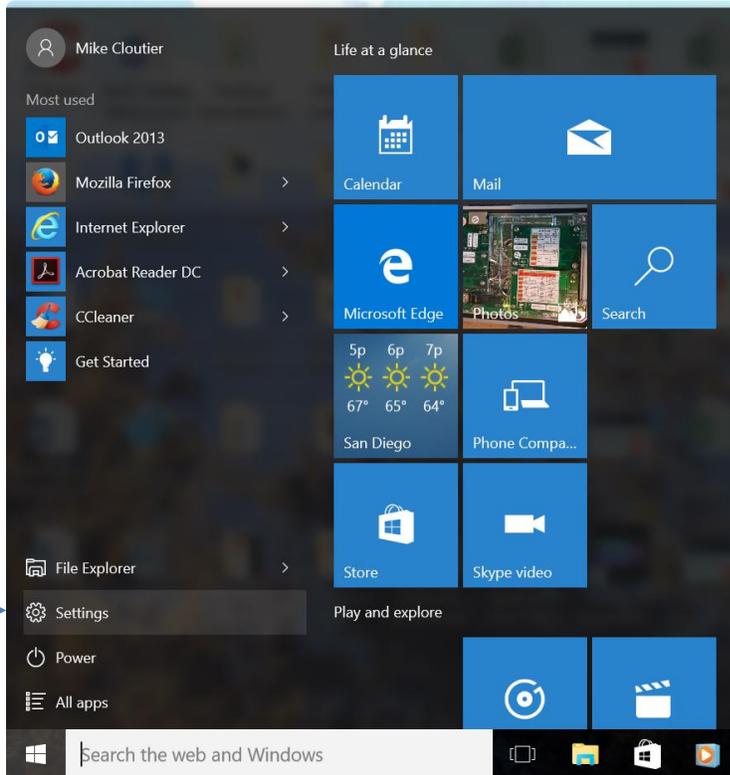




Click on Network and Internet:

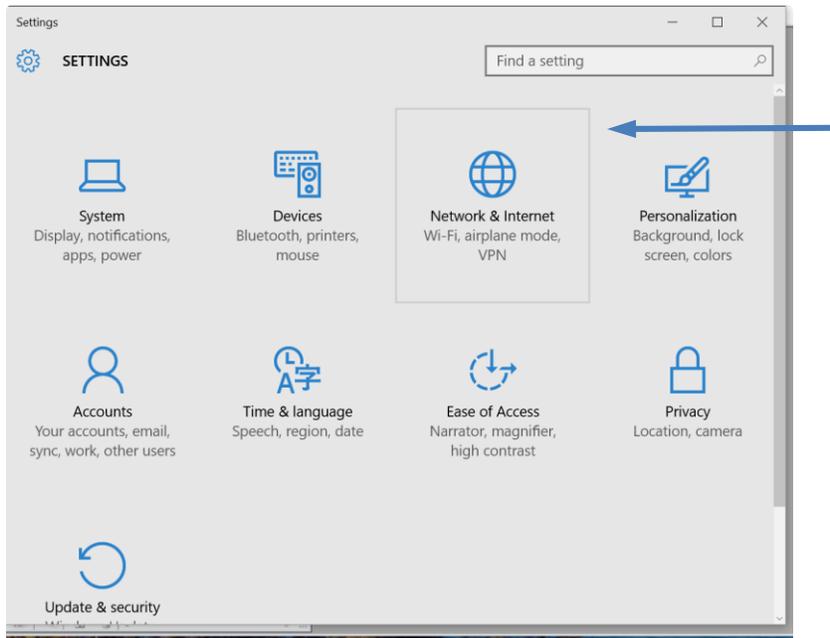


In Network & Internet, click Change adapter options:

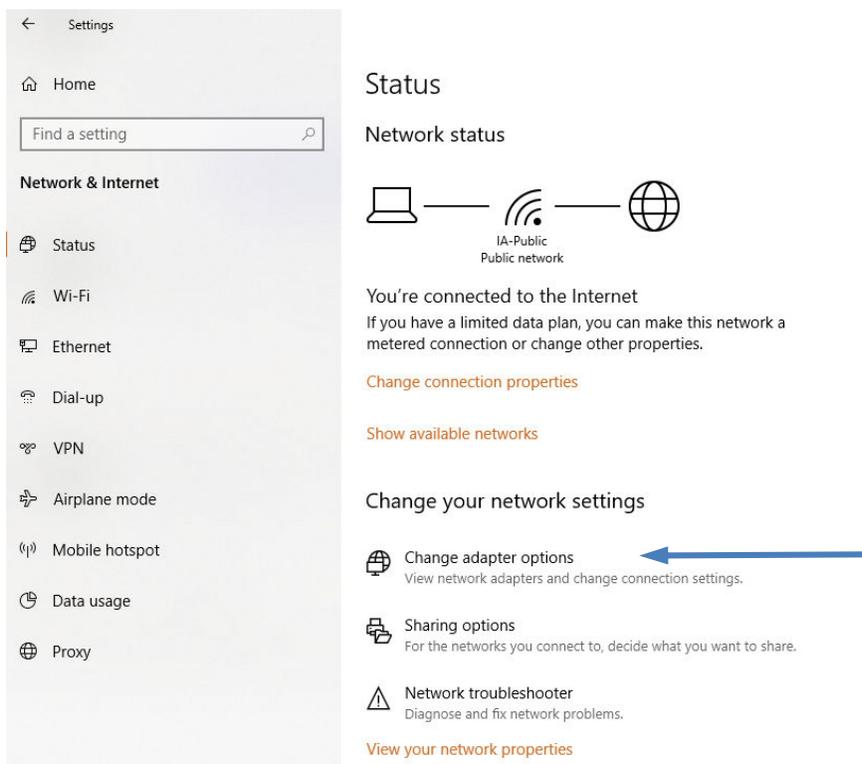




The connection you're looking for is Ethernet Unidentified network

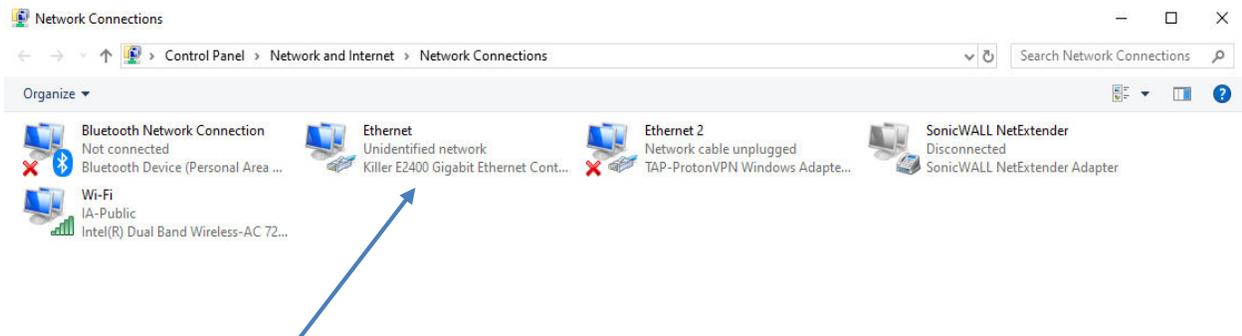


Right click, and click Properties:

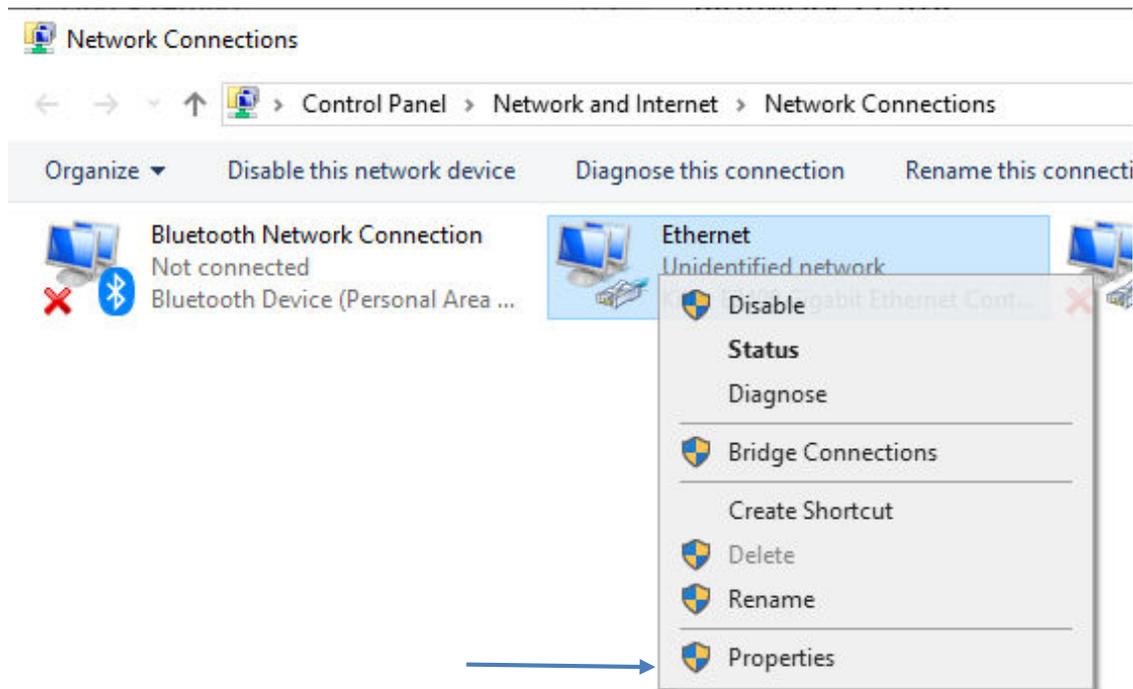




In the Properties screen, highlight Internet Protocol Version 4 (TCP/IPv4), and click Properties.

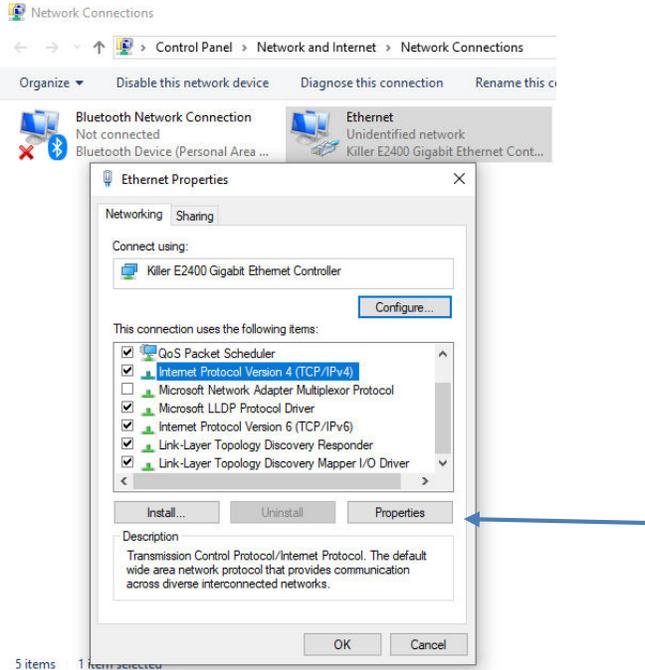


Select Use the following IP address

Change the IP address to one-off the controllers, ie if the controller is 10.0.100.29, make the computer's 10.0.100.30. Subnet mask should be 255.255.254.0.

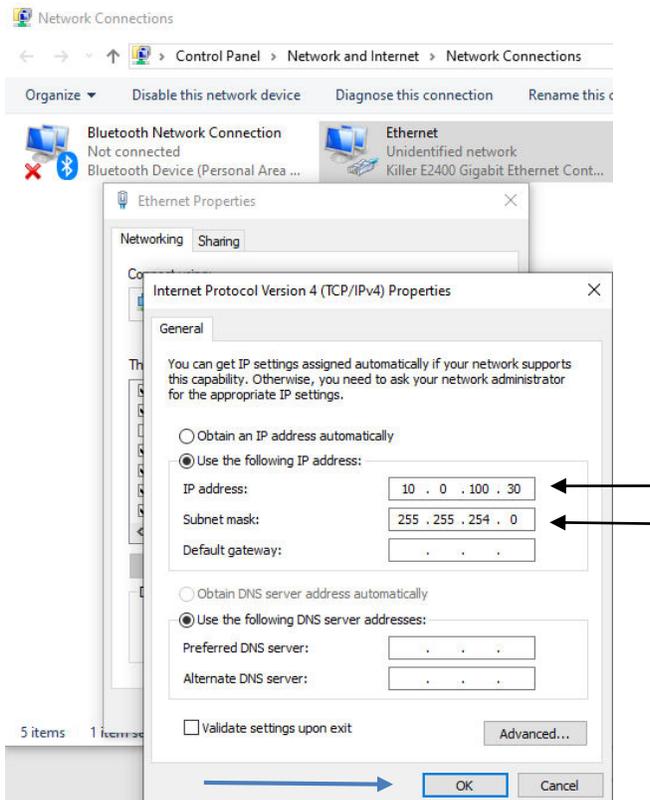




For best results, you should temporarily disable your WIFI.

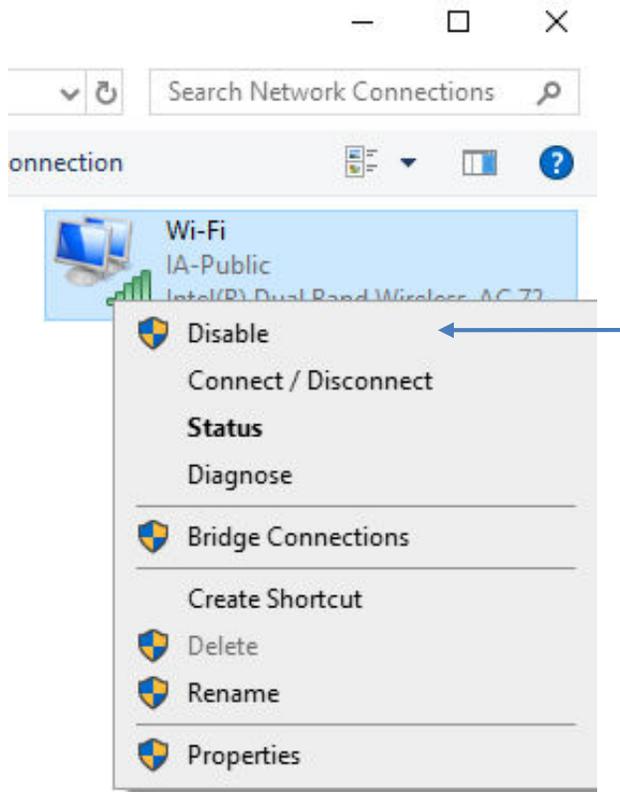

Open your web browser (Google Chrome shown) and enter the controller's IP address in the address bar and then press the enter key. The WebMaster authentication screen appears as shown below:

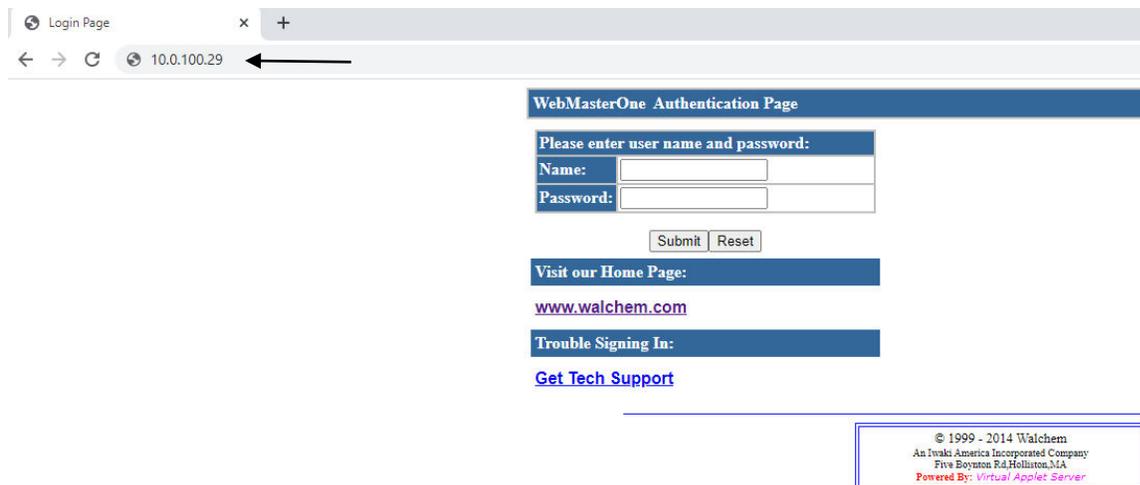



Remember to re-enable the WIFI when you are finished with the direct ethernet connection.

