

IWAKI America Inc.

WebMaster[®] & WebAlert[®] USB Driver Installation

WebMaster[®]/WebAlert[®] Windows 7 USB Driver Installation

Five Boynton Road Hopping Brook Park Holliston, MA 01746 USA TEL: 508-429-1110 FAX: 508-429-7433 WEB: www.walchem.com Notice

© 2013 WALCHEM, Iwaki America Inc. (hereinafter "Walchem") 5 Boynton Road, Holliston, MA 01746 USA (508) 429-1110 All Rights Reserved Printed in USA

SOFTWARE LICENSE AGREEMENT AND WARRANTY STATEMENT Do NOT install or use this software until you have read and accepted all of the terms of this License. As with all software, it is recommended that you back up your hard drive before you begin to use this software.

WALCHEM IS WILLING TO LICENSE THE SOFTWARE ONLY UPON THE CONDITION THAT YOU ACCEPT ALL OF THE TERMS CONTAINED IN THIS LICENSE AGREEMENT. PLEASE READ THE TERMS CAREFULLY BEFORE INSTALLING THE SOFTWARE, AS INSTALLING THE SOFTWARE WILL INDICATE YOUR AGREEMENT WITH THEM. IF YOU DO NOT AGREE WITH THESE TERMS, THEN WALCHEM IS UNWILLING TO LICENSE THE SOFTWARE TO YOU, IN WHICH EVENT YOU SHOULD NOT INSTALL OR USE THE SOFTWARE.

The Software. The Software licensed under this Agreement consists of Drivers, configuration file(s), and documentation referred to as USB DRIVER (the "Software").

Free Use. You are authorized to use the Software on a royalty-free basis, without payment of any kind, provided that you have accepted all terms of this Agreement. This Agreement shall take precedence over any prior licenses, and any conflicting, inconsistent, or additional terms in such licenses shall be null and void.

Re-Distribution is NOT PERMITTED. You may inform others about the availability of this software and this web site, but you may not give copies of this software to others, or offer it for direct download from another server or web site, or redistribute this software in any other form to any third party, unless you have obtained a written permission from us to do so. You may copy the Software for archival purposes, provided that you have not altered it in any way.

Trademarks. WebMaster®, WebAlert®, WALCHEM, and the logo images are trademarks or registered trademarks of WALCHEM and/or its suppliers. All other product names may be trademarks of their respective owners.

WARRANTY DISCLAIMER; LIMITATION OF LIABILITY. WALCHEM PROVIDES THE SOFTWARE "AS-IS." NEITHER WALCHEM NOR ANY OF ITS SUPPLIERS OR RESELLERS MAKES ANY WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. WALCHEM AND ITS SUPPLIERS SPECIFICALLY DISCLAIM THE IMPLIED WARRANTIES OF TITLE, NON-INFRINGEMENT, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, SYSTEM INTEGRATION, AND DATA ACCURACY. THERE IS NO WARRANTY OR GUARANTEE THAT THE OPERATION OF THE SOFTWARE WILL BE UNINTERRUPTED, ERROR-FREE, OR VIRUS-FREE, OR THAT THE SOFTWARE WILL MEET ANY PARTICULAR CRITERIA OF PERFORMANCE, QUALITY, ACCURACY, PURPOSE, OR NEED. YOU ASSUME THE ENTIRE RISK OF SELECTION, INSTALLATION, AND USE OF THE SOFTWARE. THIS DISCLAIMER OF WARRANTY CONSTITUTES AN ESSENTIAL PART OF THIS AGREEMENT. NO USE OF THE SOFTWARE IS AUTHORIZED HEREUNDER EXCEPT UNDER THIS DISCLAIMER. To the extent that this Warranty Statement is inconsistent with the jurisdiction where you use the Software, the Warranty Statement shall be deemed to be modified consistent with such local law. Under such local law, certain limitations may not apply, and you may have additional rights, which vary from jurisdiction to jurisdiction. For example, some states in the United States and some jurisdictions outside the United States may: (i) preclude the disclaimers and limitations of this Warranty Statement from limiting the rights of a consumer; (ii) otherwise restrict the ability of a manufacturer to make such disclaimers or to impose such limitations; or (iii) grant the consumer additional legal rights, specify the duration of implied warranties which the manufacturer cannot disclaim, or prohibit limitations on how long an implied warranty lasts.

INDEPENDENT OF THE FORGOING PROVISIONS, IN NO EVENT AND UNDER NO LEGAL THEORY, INCLUDING WITHOUT LIMITATION, TORT, CONTRACT, OR STRICT PRODUCTS LIABILITY, SHALL WALCHEM OR ANY OF ITS SUPPLIERS BE LIABLE TO YOU OR ANY OTHER PERSON FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY KIND, INCLUDING WITHOUT LIMITATION, DAMAGES FOR LOSS OF GOODWILL, WORK STOPPAGE, COMPUTER MALFUNCTION, OR ANY OTHER KIND OF COMMERCIAL DAMAGE, EVEN IF WALCHEM HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THIS LIMITATION SHALL NOT APPLY TO LIABILITY FOR DEATH OR PERSONAL INJURY TO THE EXTENT PROHIBITED BY APPLICABLE LAW.

IN NO EVENT SHALL WALCHEM'S LIABILITY FOR ACTUAL DAMAGES FOR ANY CAUSE WHATSOEVER, AND REGARDLESS OF THE FORM OF ACTION, EXCEED THE AMOUNT OF THE PURCHASE PRICE PAID FOR THE SOFTWARE LICENSE OR ONE UNITED STATES DOLLAR, WHICHEVER IS THE GREATER.

MISCELLANEOUS. This Agreement constitutes the entire understanding of the parties with respect to the subject matter of this Agreement and merges all prior communications, representations, and agreements. This Agreement may be modified only by a written agreement signed by the parties. If any provision of this Agreement is held to be unenforceable for any reason, such provision shall be reformed only to the extent necessary to make it enforceable. This Agreement shall be construed under the laws of the State of Utah, USA, excluding rules regarding conflicts of law. The application the United Nations Convention of Contracts for the International Sale of Goods is expressly excluded. This license is written in English and English is its controlling language. All rights not expressly granted here are reserved to WALCHEM.

QUICK START GUIDE WINDOWS 7



USB DRIVER INSTALLATION FOR WINDOWS 7


Step 1

- ▶ Plug the USB cable into the WebMaster/WebAlert and your computer.
- ► You will see this message on your screen



Step 2


► Go to Start, Control Panel and Click 'System and Security'

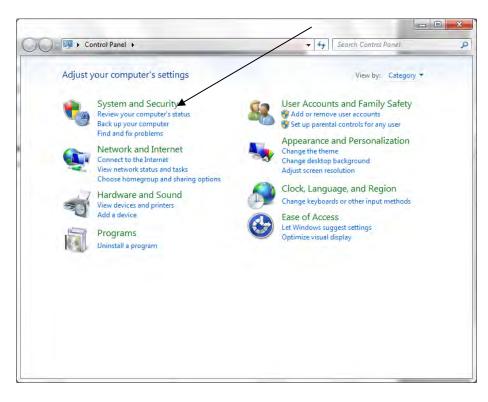


Quick Start Guide WINDOWS 7

Step 3

Click 'Device Manager' (under 'System')

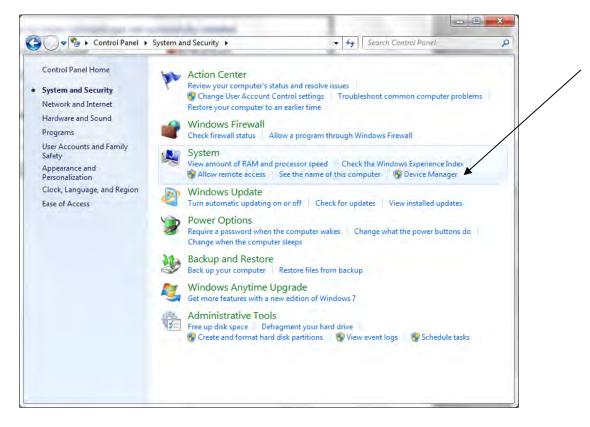

Device Manager screen will look like this:

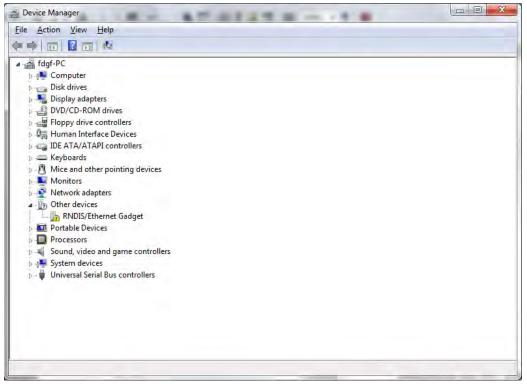

Quick Start Guide WINDOWS 7

Step 4

 Insert disc and select 'Open folder to View Files'

Step 5

- Go back to Device Manager, and right click the RNDIS/Ethernet Gadget.. Select 'Update Driver Software'.
- ► Select 'Browse my computer for driver software'

DVD RW Drive (D:) 090414_1234	How do you want to search for driver software?
General options Open folder to view files Using Windows Explorer Copy disc Using Roxio Burn View more AutoPlay options in Control Panel	 Search automatically for updated driver software Windows will search your computer and the Internet for the latest driver software for your device, unless you've disabled this feature in your device installation settings. Browse my computer for onver software Locate and install driver software manually.

Step 6

► Click 'Browse' to search for the CD/DVD Drive

Browse for driver software	e on your computer
earch for driver software in this lo	ocation:
D:\	✓ Browse
	t of device drivers on my computer driver software compatible with the device, and all driver bry as the device.

Quick Start Guide WINDOWS 7


Step 7

▶ Browse to Computer, CD/DVD drive, click 'OK'

1

My Pictures	
Hy Videos	
B Saved Games	
🕑 Searches	
🖉 🌉 Computer	
) 🕹 🌉 OS (C:)	
> DVD RW Drive (D:) 090414_1234	10
🖻 👝 Local Disk (Z:)	
🛛 📬 Network	Space free: 0 Total size: 15

Step 8

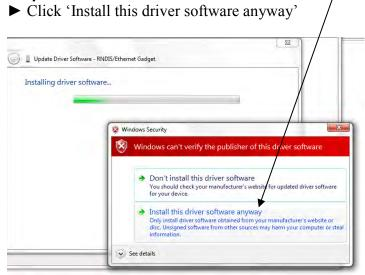


Step 9




Step 10

- ► Return to the Control Panel
- Click 'View Network Status and Tasks'

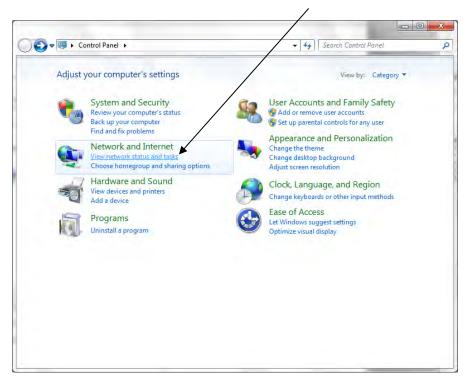


Step 11


Click 'Local Area Connection 2',

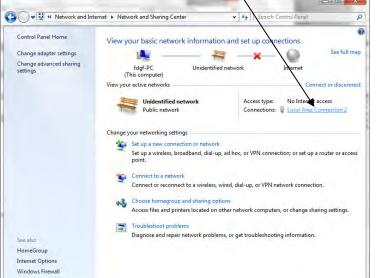

Step 13

► Highlight Internet Protocol Version 4 (TCP/IPv4) and then click 'Properties'

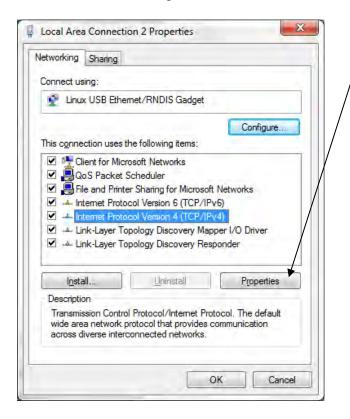

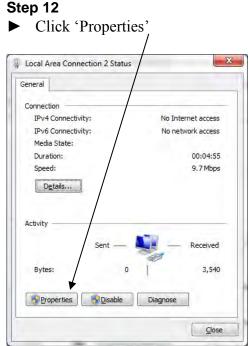

Step 14

- Select 'Use the following IP address' and type in 199.199.19
- ► Click 'OK'

General		
	automatically if your network supports eed to ask your network administrator	
Obtain an IP address auton	natically	
() Use the following IP addres	s:	
IP address:	199 . 199 . 199 . 1	
Subnet mask:	255 . 255 . 255 . 0	
Default gateway:	at a a	
O Dtain DNS server address	automatically	
() Use the following DNS serve	er addresses:	
Preferred DNS server:	G & 9	
Alternate DNS server:	al 4 4	
🔲 Validate settings upon exit	Ad <u>v</u> anced	

Step 15

► Open Internet Explorer and enter 199.199.199.2 in the address bar. The WebMaster Authentication screen appears as shown below:

Login Page - Windows Internet Explorer	▲戸 法法法院 田 いい・ち ●	
♥ ♥ € http://199.199.199.2/	- 🗟 ++ 🗶 🖉 Bing	9
K 🛃 Windows Live Live Search	😰 🔻 What's New Profile Mail Photos	🔅 🗹 Sign i
🖕 Favorites 🛛 👍 🖉 Web Slice Gallery 👻		
🛿 Login Page	🔐 🔹 📾 👻 📾 💌 Page 🕶 Sa	ifety ▼ T <u>o</u> ols ▼ 🔞 ▼
WebMaster Authentication Page		
Please enter user name and password:		
Name:		
Password:		
Submit Reset		
Visit our Home Page:		
www.walchem.com		
Trouble Signing In:		
Get Tech Support		
	© 1999 - 2009 Walchem An Iwaki America Incorporated Company Five Boynton Rd.Holliston.MA	
	Powered By: Virtual Applet Server	
	m	•

10


CHECK BROWSER SETTINGS

Step 1




- ► Click 'Tools' from the top menu bar
- Select 'Internet Options' from the drop down menu

Step 2

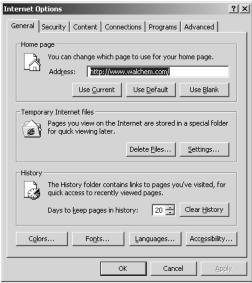

Step 3

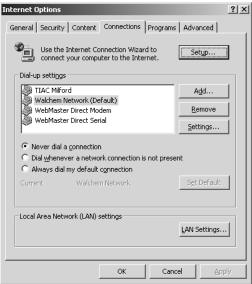

► Click the 'Connections' tab

Click 'Never dial a connection'
Click 'OK'

Quick Start Guide TROUBLESHOOTING THE USB CONNECTION

Troubleshooting the USB connection

The problem: You connect to the Webmaster with your USB cable, open your browser, type in the IP address 199.199.199.2, and the *Login Page* doesn't load. What do you do?

- 1. First, when you plug the cable in, you should see "Device can perform faster on a
 - USB 2.0 port...." message.



If you see this, then go to your Network Connections on your computer. Under "LAN or High Speed Connection", you should see Local Area Connection 2 (it may be Local Area Connection 3, or some other number). It should be connected, and the connection time moving. If you see this, then you're connected.

2. Right-click on Properties. Highlight TCP-IP (in Vista, it will be TCP-IP-v4), and click Properties. The IP address should be 199.199.199.1, and the subnet mask should be 255.255.255.0.

Local Area Connection 4 Properties	33	bón 🖼 Rename this c	
Networking Sharing	ork Category Own	ner Type	Phone # or Host Ad
Connect using			
P Linux USB Ethemet/RNDIS Gadget	MDC V-		
Configure.	and NY	Wineless Network Conne	ection
Clerent for Microsoft Networks Dos Placket Scheduler Dos	Internet Protocol Version 8 (TC) General You can get IP settings assign the capability. Otherwise, you for the appropriate IP settings to the appropriate IP settings (Chiani an IP address: Subnet mask: Default gateway:	ed automatically if your net need to ask your network , omotically	admenetizator
	Othern (Mill Server addre Grube the following DMS ser Preferred DMS server: Alternate DMS server:		· ·

- 3. If you don't get the message "This device can perform faster", or if you don't see the Local Area Connection 2, then unplug your USB cable, wait 3 minutes, and plug back in.
- 4. If waiting 3 minutes and plugging the USB cable back in doesn't work, re-boot both computer and controller.
- 5. If this doesn't work, read the tips below:

Quick Start Guide TROUBLESHOOTING THE USB CONNECTION

Scenario	Cause	Corrective Action
	Driver not installed	Install driver
Found Wizard	Driver installed on another USB port	Move cable to the other port
Connection worked normally, but after removing cable and plugging it back in after a minute, can't reconnect. Get "this device can work faster" message but No 'Local Area Connection 2' appears.	Driver in PC has not reset	Unplug cable and wait for 5 minutes, or reboot PC
Get "this device can work faster" message when cable is connected. Local Area Connection 2 says it's connected but time is stuck at 0:00. Local Area Connection 2 does not disappear when cable is disconnected	Driver in PC has crashed. Can happen when Controller Restart button is clicked with USB cable connected.	Reboot PC. May require a hard reboot if a blue screen appears on restart attempt.
	Driver in PC is corrupt	Uninstall and reinstall the driver
No "this device can work faster" message when cable is connected.	-	Replace CI board
		Put tape between grommet and CI board, or
	only) Faulty USB cable	remove grommet
		Replace USB cable
	Noisy DC power supply in controller	Install two p/n 103608 ferrite clamps on the DC output cable of the power supply
	PC does not recognize all USB 1.0 devices	Install a 2.0 USB hub between PC and cable
Get "this device can work faster" message when cable is connected, but No Local Area Connection 2	Driver installed improperly	Uninstall and reinstall driver
	Faulty USB cable	Replace USB cable
message when cable is connected, get Local Area Connection 2, but it can't be enabled	Noise coupling in on SI, AI, DI	Properly shield all I/O cables. Ensure proper earth ground connection to controller.
	Local Area Connection 2 not set to use fixed IP address	Enter 'Local Area Connection 2' properties and enter fixed IP address of 199.199.199.1 as described in Quick Start Guide