


Ethernet Settings - Connecting Intuition-6 to a Local Area Network (LAN)

Go to Config menu, then to Ethernet settings.

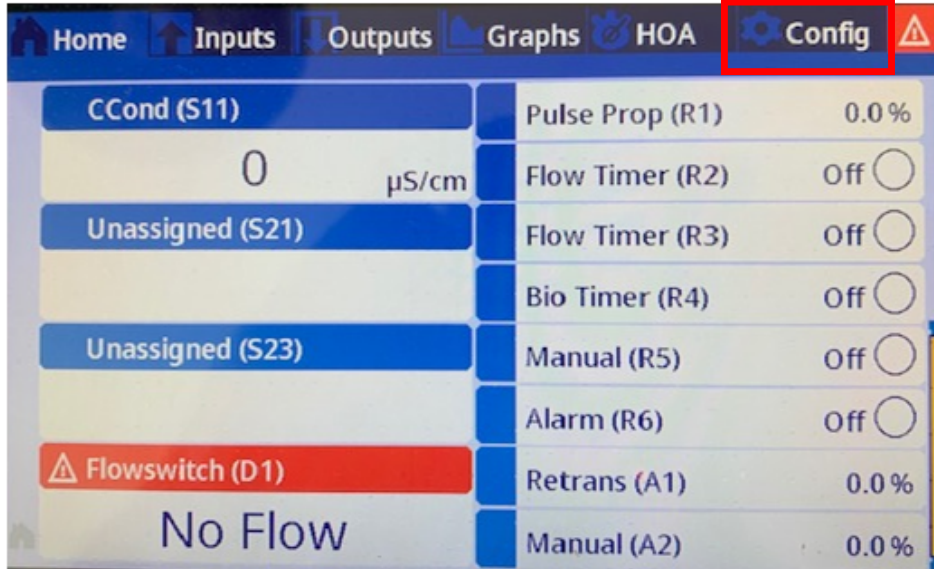


There are two ways to program the Intuition-6 Ethernet Settings to enable a connection to a LAN.

Manually enter the Ethernet Settings or **Enable DHCP**.


Manually: This is where you enter the following necessary addresses. Typically, the customer's IT people will provide these addresses.

- Controller IP
- Netmask
- Gateway

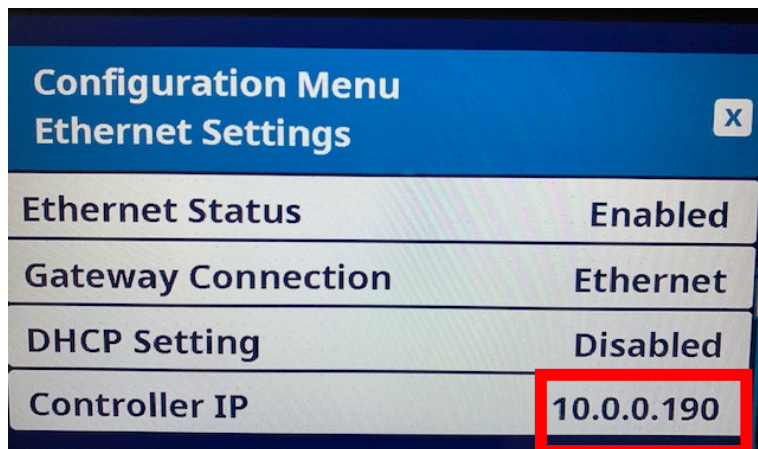

The screenshot shows the 'Configuration Menu Ethernet Settings' interface. The 'Controller IP' field is highlighted with a red box and contains the value '10.0.0.190'.

Configuration Menu Ethernet Settings	
Ethernet Status	Enabled
Gateway Connection	Ethernet
DHCP Setting	Disabled
Controller IP	10.0.0.190

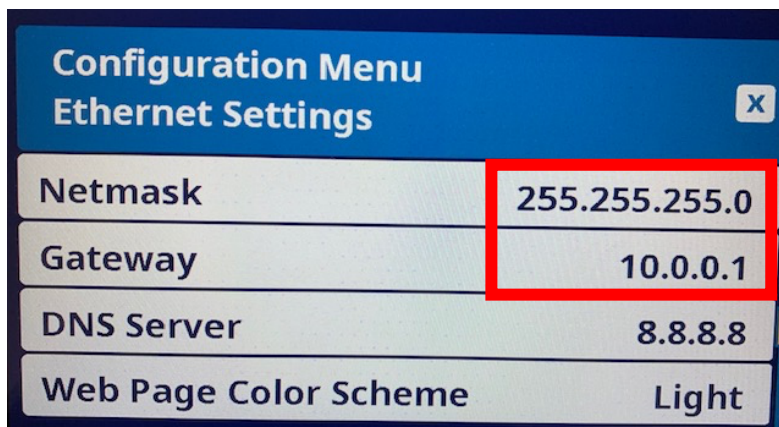


The screenshot shows the 'Configuration Menu Ethernet Settings' interface. The 'Netmask' and 'Gateway' fields are highlighted with a red box and contain the values '255.255.255.0' and '10.0.0.1' respectively.

Configuration Menu Ethernet Settings	
Netmask	255.255.255.0
Gateway	10.0.0.1
DNS Server	8.8.8.8
Web Page Color Scheme	Light


DHCP: This is a second way to program the Intuition-6 to connect to a LAN - **Enable DHCP**.

When DHCP is Enabled, the controller connects to the LAN and finds its own Controller IP, Netmask and Gateway addresses.


Go to the Config menu, then go to the Ethernet Settings menu.

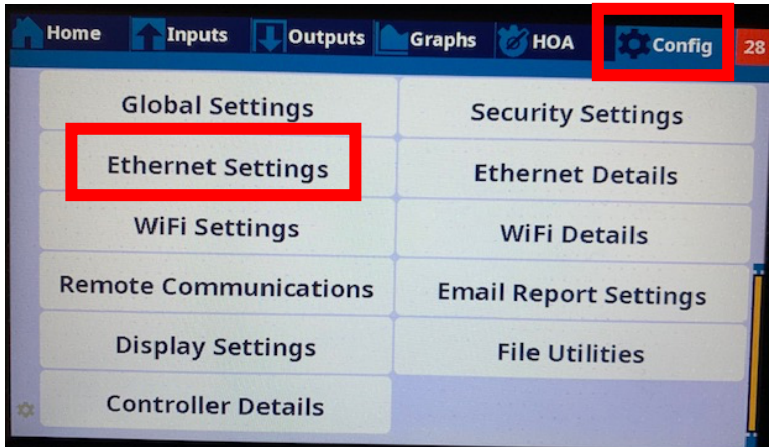


Press on the DHCP Settings field that currently says Disabled.

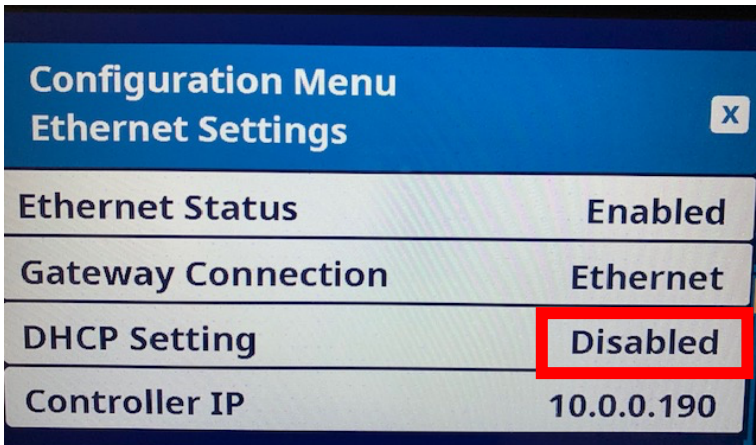

Press Enable.

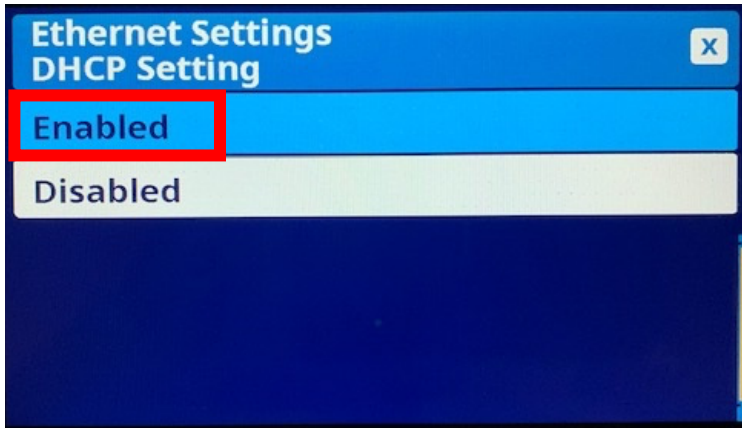


The DHCP Setting field will now say Enabled.

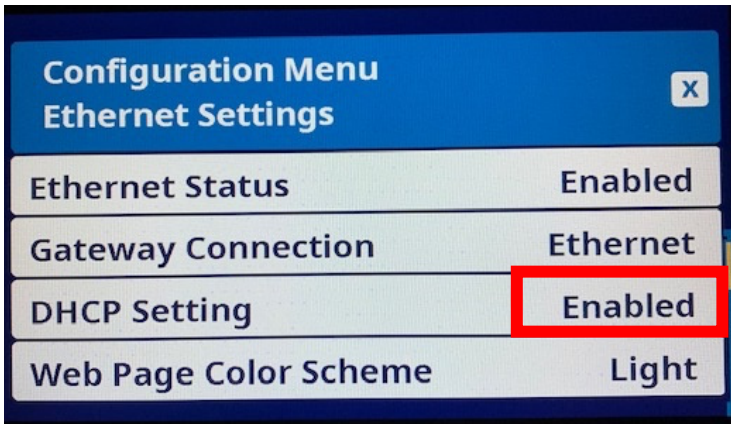

Go back to the Config menu, and then go into the Ethernet Details menu.




You will see the DHCP Status. And you will see the Controller IP address.

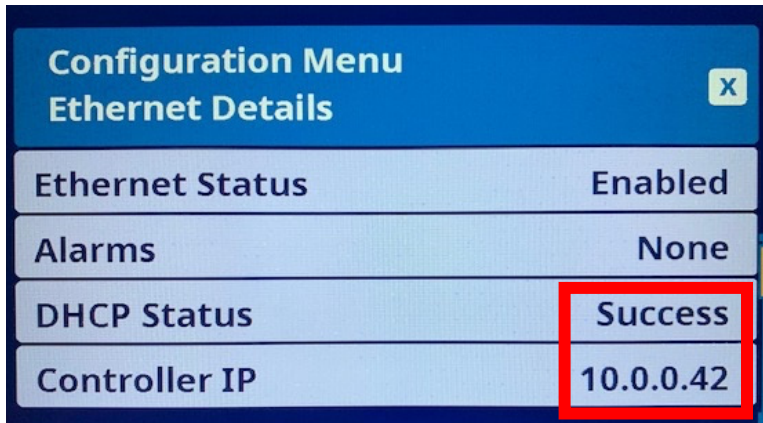

Configuration Menu Ethernet Details	
Ethernet Status	Enabled
Alarms	None
DHCP Status	Success
Controller IP	10.0.0.42

Swipe down and you will also see the Netmask and Gateway addresses.

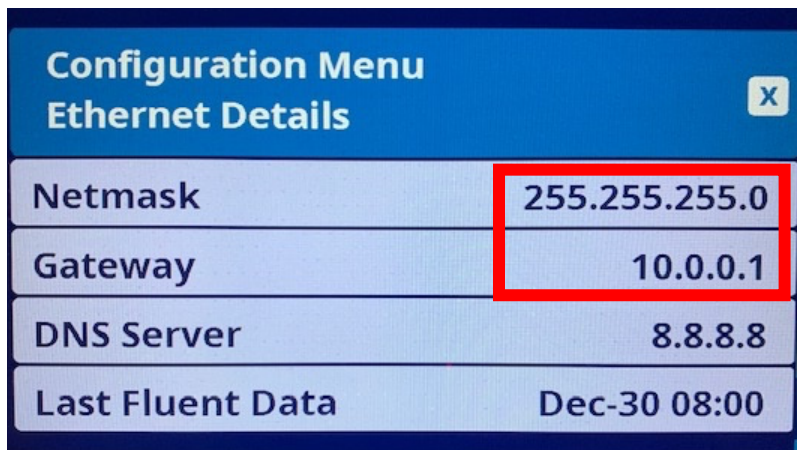

Configuration Menu Ethernet Details	
Netmask	255.255.255.0
Gateway	10.0.0.1
DNS Server	8.8.8.8
Last Fluent Data	Dec-30 08:00

Once the Intuition-6 controller has the Ethernet Settings programmed, then from a computer of same LAN, open up a web browser, and type the Controller IP address into the browser search field and hit Enter.

This will bring you to the Intuition-6 Log-In screen. Enter the Username and Password and press the Log In button.

Controller Log In

Username

Password

Log In