


**102027**  
**SUBMERSION MOUNTING GLAND, STAINLESS STEEL**  
**HIGH TEMPERATURE**

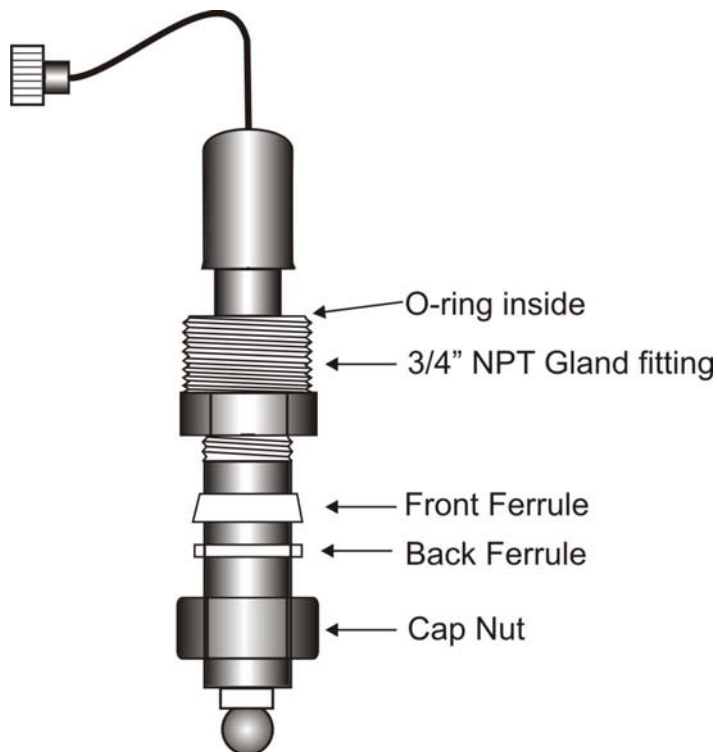

1. Lubricate the o-ring inside the  $\frac{3}{4}$ " NPT gland fitting.
2. Make sure the cap nut and the back and front Teflon® ferrules are arranged as shown in the illustration.
3. With the cap nut loose, insert a 12mm glass or polymer electrode into the fitting from either direction. Be careful not to damage the o-ring.
4. **HAND TIGHTEN** the cap nut just enough to grip the electrode. *Too much pressure will crush the electrode!*