
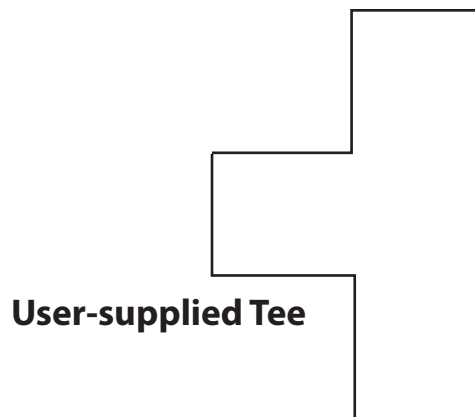


Stainless Steel High Temperature/High Pressure Installation Instructions

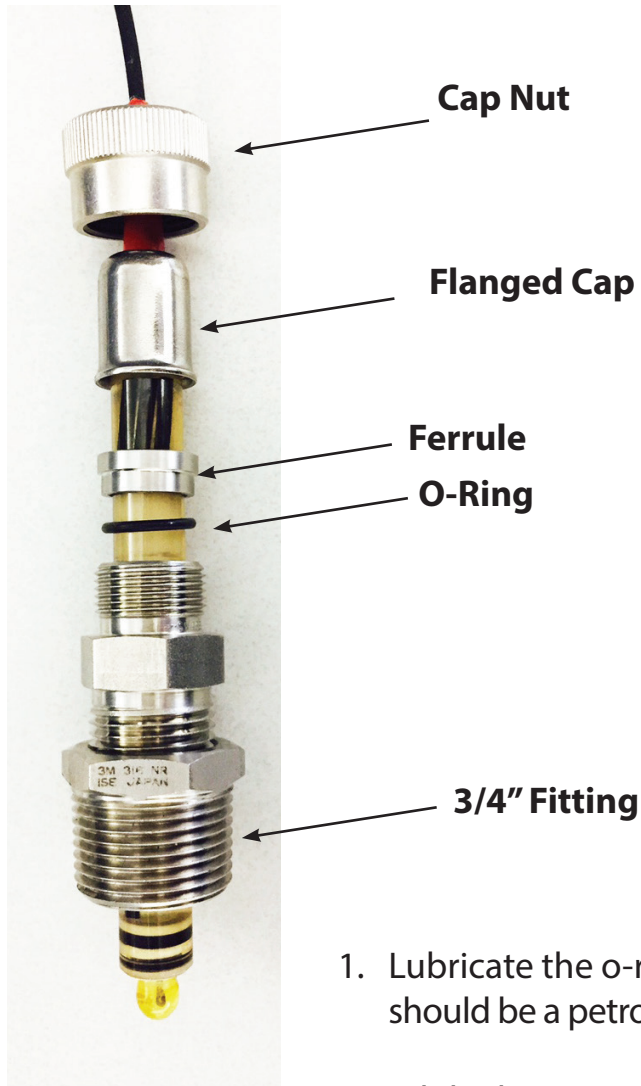

1. Lubricate the o-ring inside the gland. (Lubricant should be a petroleum based grease)
2. While the piping system is under NO pressure, install the gland into a 3/4" NPT tee fitting.
3. Use Walchem high pressure pH and ORP electrodes (P/N 102029 and 102963), which include the stainless steel flanged cap.
4. Install the cap nut over the top of the flanged cap. HAND tighten the cap nut onto the top of the gland fitting.