

WALCHEM

IWAKI America Inc.

Landline Modem Option

WebMaster[®]/WebAlert[®] **Modem Option Installation Manual**


1.0 WebMaster Installation



CAUTION! There are live circuits inside the controller even when the power switch on the front panel is in the OFF position! The front panel must never be opened before power to the controller is REMOVED!

If your controller is prewired, it is supplied with a 10 foot, 14 AWG power cord with USA style plug and 8 inch, 18 AWG USA style receptacle cords for the powered relay outputs. A tool (#1 Phillips screwdriver) is required to open the front panel.

1. Remove the defective modem (if applicable) by pulling it straight up out of the socket. Check the socket for any pins that may have broken off.
2. Plug the new modem into the connector oriented as shown below, taking care not to bend or break any pins.

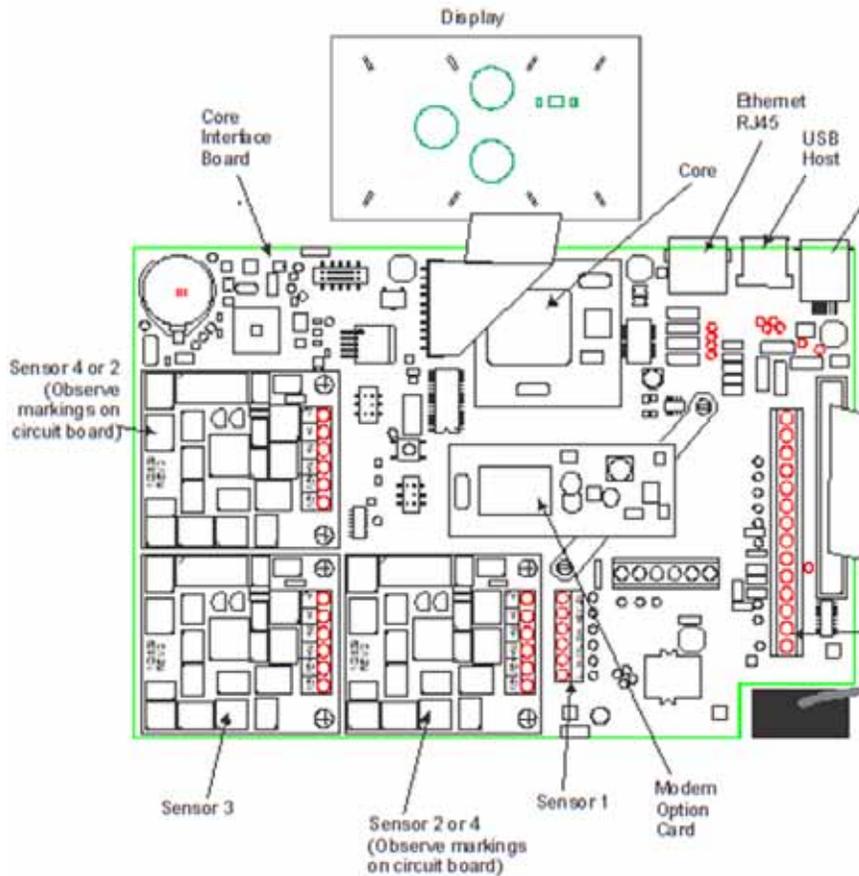

WebMaster Modem location


2.0 WebAlert Installation



CAUTION! There are live circuits inside the controller even when the power switch on the front panel is in the OFF position! The front panel must never be opened before power to the controller is REMOVED!

If your controller is prewired, it is supplied with a 10 foot, 14 AWG power cord with USA style plug. A tool (#1 Phillips screwdriver) is required to open the front panel.

1. Remove the defective modem (if applicable) by pulling it straight up out of the socket. Check the socket for any pins that may have broken off.
2. Plug the new modem into the connector oriented as shown below, taking care not to bend or break any pins.

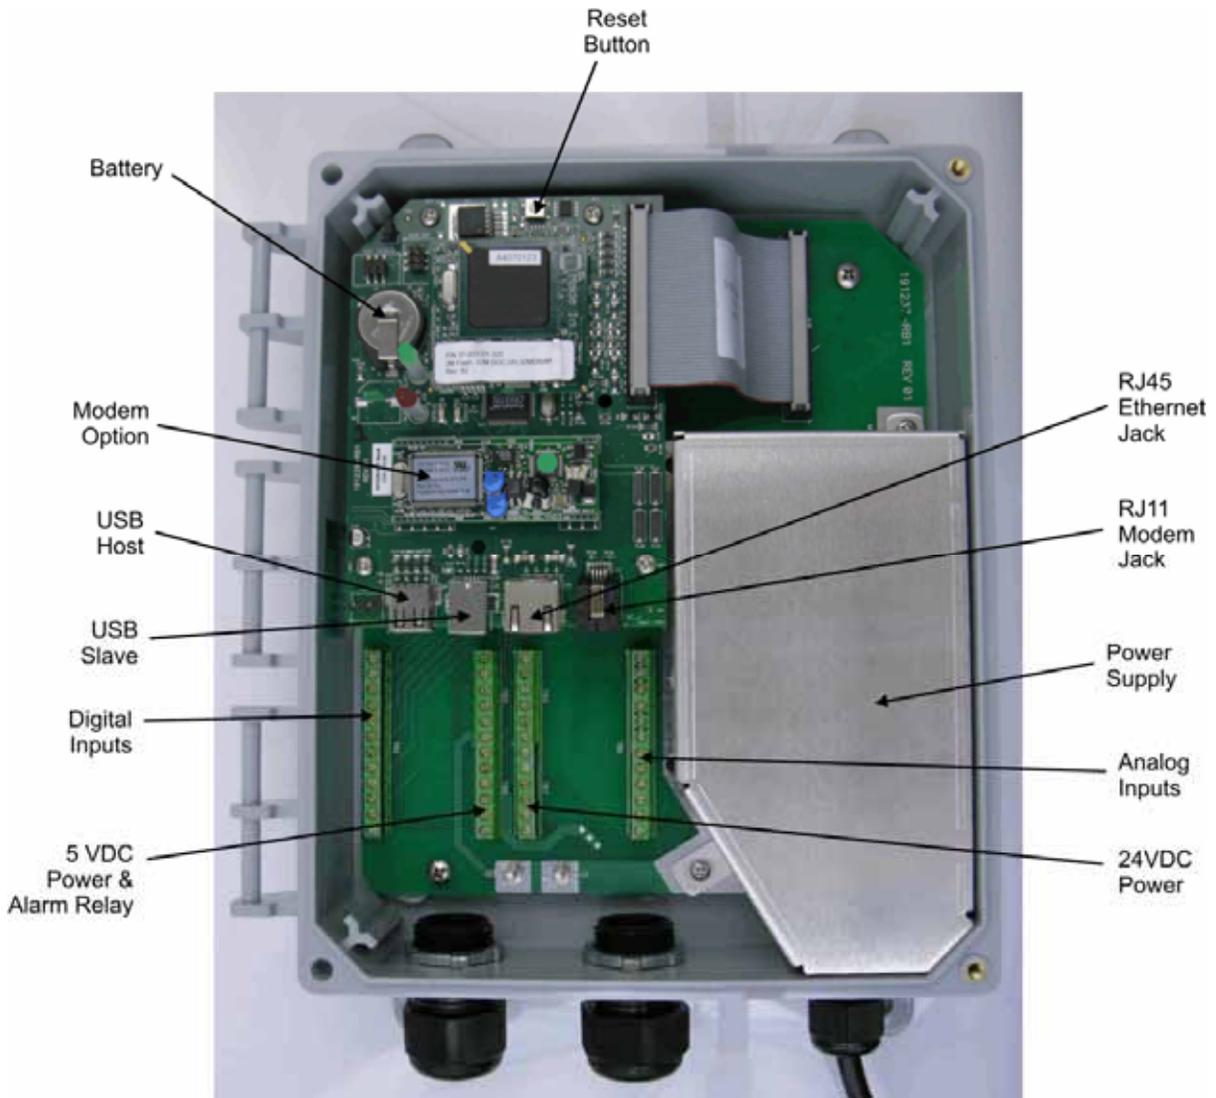

WebAlert Modem Location