

Pyxis[®]

ST-588 PTSA/Fluorescent Polymer Dual Inline Sensor User Manual



Water Professionals Deserve Better Tools.
www.pyxis-lab.com

ST-588 PTSA/Fluorescent Polymer Dual Inline Sensor User Manual

October 12, 2020
Rev. 2.00

Pyxis Lab, Inc.
1729 Majestic Dr. Suite 5
Lafayette, CO 80026 USA
www.pyxis-lab.com

Table of Contents

1	Introduction	2
1.1	Main Features	2
2	Specifications	3
3	Unpacking Instrument	4
3.1	Standard Accessories	4
3.2	Optional Accessories	5
4	Installation	6
4.1	ST-588 Piping	6
4.2	ST-588SS Piping	6
4.3	Wiring	7
4.4	Connecting via Bluetooth	8
4.5	Connecting via USB	8
5	Setup and Calibration with uPyxis® Mobile App	9
5.1	Download uPyxis® Mobile App	9
5.2	Connecting to uPyxis® Mobile App	9
5.3	Calibration Screen and Reading	10
5.4	Diagnosis Screen	11
5.5	Device Info Screen	12
6	Setup and Calibration with uPyxis® Desktop App	12
6.1	Install uPyxis® Desktop App	12
6.2	Connecting to uPyxis® Desktop App	13
6.3	Information Screen	13
6.4	Calibration Screen	14
6.5	Diagnosis Screen	14
7	Outputs	15
7.1	4–20mA Output Setup	15
7.2	Communication using Modbus RTU	15
8	Sensor Maintenance and Precaution	15
8.1	Methods to Cleaning the ST-588	16
8.2	Storage	16
9	Troubleshooting	17
10	Contact Us	18

Warranty Information

Confidentiality

The information contained in this manual may be confidential and proprietary and is the property of Pyxis Lab, Inc. Information disclosed herein shall not be used to manufacture, construct, or otherwise reproduce the goods described. Information disclosed herein shall not be disclosed to others or made public in any manner without the express written consent of Pyxis Lab, Inc.

Standard Limited Warranty

Pyxis Lab warrants its products for defects in materials and workmanship. Pyxis Lab will, at its option, repair or replace instrument components that prove to be defective with new or remanufactured components (i.e., equivalent to new). The warranty set forth is exclusive and no other warranty, whether written or oral, is expressed or implied.

Warranty Term

The Pyxis warranty term is thirteen (13) months ex-works. In no event shall the standard limited warranty coverage extend beyond thirteen (13) months from original shipment date.

Warranty Service

Damaged or dysfunctional instruments may be returned to Pyxis for repair or replacement. In some instances, replacement instruments may be available for short duration loan or lease.

Pyxis warrants that any labor services provided shall conform to the reasonable standards of technical competency and performance effective at the time of delivery. All service interventions are to be reviewed and authorized as correct and complete at the completion of the service by a customer representative, or designate. Pyxis warrants these services for 30 days after the authorization and will correct any qualifying deficiency in labor provided that the labor service deficiency is exactly related to the originating event. No other remedy, other than the provision of labor services, may be applicable.

Repair components (parts and materials), but not consumables, provided during a repair, or purchased individually, are warranted for 90 days ex-works for materials and workmanship. In no event will the incorporation of a warranted repair component into an instrument extend the whole instrument's warranty beyond its original term.

Warranty Shipping

A Repair Authorization (RA) Number must be obtained from Pyxis Technical Support before any product can be returned to the factory. Pyxis will pay freight charges to ship replacement or repaired products to the customer. The customer shall pay freight charges for returning products to Pyxis. Any product returned to the factory without an RA number will be returned to the customer. To receive an RMA you can generate a request on our website at <https://pyxis-lab.com/request-tech-support/>.

Pyxis Technical Support

Contact Pyxis Technical Support at +1 (866) 203-8397, service@pyxis-lab.com, or by filling out a request for support at <https://pyxis-lab.com/request-tech-support/>.

1 Introduction

The Pyxis ST-588 inline fluorometer probe simultaneously measures the concentration of PTSA and Fluorescent Polymer in water. It can be simply inserted to the compression fitting port of a custom-made tee. The standard ST-001 installation tee provided with each ST-588 sensor, has two $\frac{3}{4}$ inch female NPT ports and can be placed to an existing $\frac{3}{4}$ inch sample water line. Pyxis Lab also offers 2" and 3" Tee formats for larger flow installations. The 4–20mA current output of the ST-588 probe can be connected to any controller that accepts an isolated or non-isolated 4–20mA input. The ST-588 probe is a smart device. In addition to measuring PTSA and Fluorescent Polymer, the ST-588 probe has extra photo-electric components that monitor the color and turbidity of the sample water. This extra feature allows automatic color and turbidity compensation to eliminate interference commonly associated with real-world waters.

The Pyxis ST-588 probe has a short fluidic channel and can be easily cleaned. The fluidic and optical arrangement of the ST-588 probe is designed to overcome shortcomings associated with other fluorometers that have a distal sensor surface or a long, narrow fluidic cell. Traditional inline fluorometers are susceptible to color and turbidity interference and fouling and are difficult to properly clean.

1.1 Main Features

The ST-588 measures PTSA and Fluorescent Polymer in a water sample and includes the following features:

- Easy calibration with using **uPyxis®** Mobile or Desktop App.
- Automatic compensation for turbidity up to 150 NTU and color created by up to 10 ppm iron or equivalent to 10 ppm humic acid.
- Diagnostic information (probe fouling, color or turbidity over range, failure modes) are available in **uPyxis®** App or via Modbus RTU.
- Easy to remove from the system for cleaning and calibration without the need for any tools.

2 Specifications

Table 1. ST-588 Specifications

Specification*	ST-588	ST-588SS
Part Number (P/N)	50692	50693
Fluorescent Polymer Range [†]	0.0–20.0 ppm	
Fluorescent Polymer Accuracy	±0.1 ppm	
PTSA Range	0.0–200.0 ppb	
PTSA Accuracy	±1 ppb	
Excitation Wavelength	410 nm (Fluorescent Polymer) 365 nm (PTSA)	
Emission Wavelength	450 nm (Fluorescent Polymer) 410 nm (PTSA)	
Wavelength Accuracy	±1 nm	
Calibration	Two-point calibration against standard solution	
Outputs	2x 4–20mA Analog Output, RS-485 Digital Output with Modbus protocol	
Installation	Custom tee assembly (P/N: ST-001) with 3/4" FNPT socket & threaded ports	3/4" FNPT threaded ports
Cable Length	5 ft with IP67 connectors & 1.5 ft flying lead with IP67 adapter	
Power Supply	22–26 VDC, 2 W	
Dimension (L × Dia) [‡]	6.8 × 1.44 inch (172.7 × 36.6 mm)	
Weight	0.37 lbs (170 g)	2.5 lbs (1148 g)
Material	UPVC	304 Stainless Steel
Operational Temperature	40–104 °F (4–40 °C)	
Storage Temperature	20–140 °F (-7–60 °C)	
Pressure	Up to 100 psi (0.7 MPa)	Up to 290 psi (2.0 MPa)
Enclosure Rating	IP67	
Regulation	CE	

* With Pyxis's continuous improvement policy, these specifications are subject to change without notice.

[†] The fluorescent polymer concentration scale is based on the polymer containing 0.25 mole % fluorescent monomer. Typical polymer specifications are attached below but may vary by producer.

[‡] See Figure 4 for ST-588SS dimensions.

3 Unpacking Instrument

Remove the instrument and accessories from the shipping container and inspect each item for any damage that may have occurred during shipping. Verify that all accessory items are included. If any item is missing or damaged, please contact Pyxis Lab Customer Service at service@pyxis-lab.com.

3.1 Standard Accessories

- Tee Assembly 3/4" NPT (1x Tee, O-ring, and Nut) P/N: ST-001

NOTE *ST-001 is not included for ST-588SS*

- 8-Pin Female Adapter/Flying Leads Cable (1.5 ft)
- User Manual available online at <https://pyxis-lab.com/support/>

3.2 Optional Accessories






 PYXIS INLINE SENSOR ACCESSORIES - SELECT*A*GUIDE 		
Accessory Name/Description	Part Number	Photo
Pyxis ST Series Cleaning Kit <i>(Includes 500mL Sensor Cleaner / Qtips & Pipe Cleaners)</i>	SER-01	
Pyxis TAG-10 <i>(10ppm Fluorescent Polymer Calibration Std - 500mL)</i>	21054	
Pyxis TAG-20 <i>(20ppm Fluorescent Polymer Calibration Std - 500mL)</i>	21053	
Pyxis PTAG-1010 <i>(10ppm Fluorescent Polymer / 100ppb PTSA Combined Calibration Std - 500mL)</i>	21055	
Pyxis PTSA-100 <i>(100ppb PTSA Calibration Std. - 500mL)</i>	21001	
0.75" NPT Inline Sensor Tee Assembly <i>(All ST Series Sensors)</i>	50704	
2.0" NPT Inline Sensor Tee Assembly <i>(All ST Series Sensors)</i>	50756	
3.0" NPT Inline Sensor Tee Assembly <i>(All ST Series Sensors)</i>	50775	
ST-002 Inline Sensor Removal PLUG <i>(Allows ST Sensor Removal)</i>	ST-002	
ST Series Sensor Tee Replacement O-Ring <i>(All ST Series Tee's)</i>	MA-150	
ST Series Submersion Adapter Kit <i>(Submersible Kit for all ST-Series Sensors)</i>	MA-102S	
MA-CR Bluetooth Adapter for All ST Series Sensors <i>(2x 4-20mA & RS-485)</i>	MA-CR	
Bluetooth PC to Handheld Adapter <i>(For uPyxis Firmware Updates)</i>	MA-NEB	
PowerPack 1 <i>(Single Channel Power Supply w/Bluetooth)</i>	MA-BLE-1	
PowerPack 2 <i>(Dual Channel Power Supply w/Bluetooth)</i>	MA-BLE-2	
PowerPack 4 <i>(Four Channel Power Supply w/Bluetooth)</i>	MA-BLE-4	
MA-1.5CR <i>(4.9' Flying Lead Cable for All 8Pin Pyxis Sensors)</i>	50746	
MA-10CR <i>(10' Extension Cable for All 8Pin Pyxis Sensors)</i>	50741	
MA-50CR <i>(50' Extension Cable for All 8Pin Pyxis Sensors)</i>	50743	
MA-100CR <i>(100' Extension Cable for All 8Pin Pyxis Sensors)</i>	50744	

Figure 1.

4 Installation

4.1 ST-588 Piping

The provided ST-001 Tee Assembly can be connected to a pipe system through the 3/4" female ports, either socket or NPT threaded. To properly install the ST-588 probe into the ST-001 Tee Assembly, follow the steps below:

1. Insert the provided O-ring into the O-ring groove on the tee.
2. Insert the ST-588 probe into the tee.
3. Tighten the tee nut onto the tee to form a water-tight, compression seal.

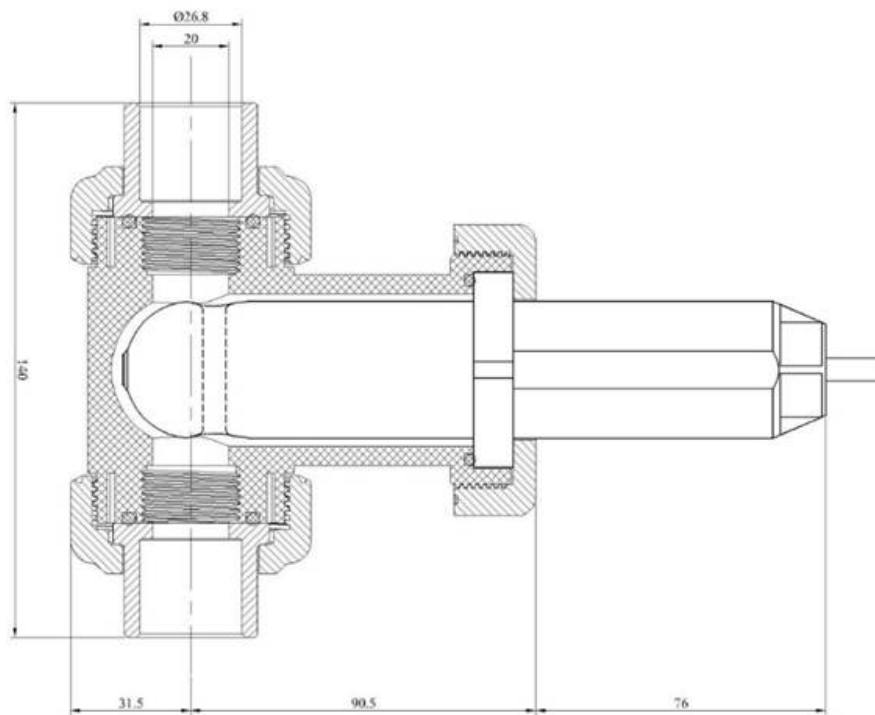


Figure 2. Dimension of the ST-588 and the ST-001 Tee Assembly (mm)

4.2 ST-588SS Piping

The ST-588SS probe has 3/4" female NPT threaded ports on the probe itself and therefore does not require a custom tee assembly. It is recommended that two 3/4" NPT to 1/4" tubing adapters are used to connect the probe to the sampling system. Sample water entering the probe must be cooled down to below 104 °F (40 °C). The probe can be held by a 1.75-inch pipe clamp or mounted to a panel with four 1/4-28 bolts. See Figure 4 for ST-588SS dimensions.

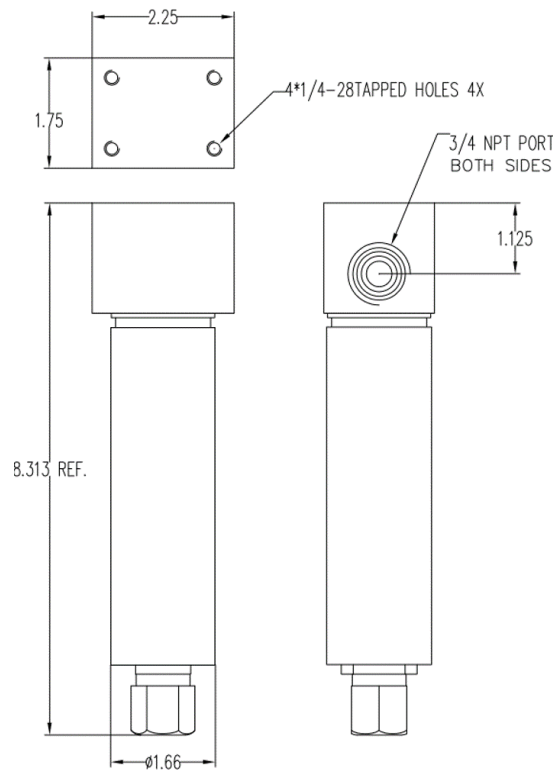


Figure 3. Dimension of the ST-588SS (inch)

4.3 Wiring

If the power ground terminal and the negative 4–20mA terminal in the controller are internally connected (non-isolated 4–20mA input), it is unnecessary to connect the 4–20mA negative wire (gray) to the 4–20mA negative terminal in the controller. If a separate DC power supply other than that from the controller is used, make sure that the output from the power supply is rated for 22–26 VDC@ 85 mA.

NOTE *The negative 24V power terminal (power ground) and the negative 4–20mA terminal on the ST-588 probe are internally connected.*

Follow the wiring table below to connect the ST-588 probe to a controller:

Table 2.

Wire Color	Designation
Red	24V +
Brown	24V Power ground
White	Fluorescent Polymer, 4–20mA +
Pink	PTSA, 4–20mA +
Gray*	4–20mA -
Blue	RS-485 A
Yellow	RS-485 B
Green	RS-485 C, earth ground

* Internally connected to the power ground

4.4 Connecting via Bluetooth

A Bluetooth adapter (P/N: MA-WB) can be used to connect a ST-588 probe to a smart phone with the **uPyxis®** Mobile App or a computer with the **uPyxis®** Desktop App.



Figure 4. Bluetooth connection to ST-588 probe

4.5 Connecting via USB

A USB-RS485 adapter (P/N: MA-485) can be used to connect a ST-588 probe to a computer with the **uPyxis®** Desktop App.

NOTE Using non-Pyxis USB-RS485 adapters may result in permanent damage of the ST-588 probe communication hardware.

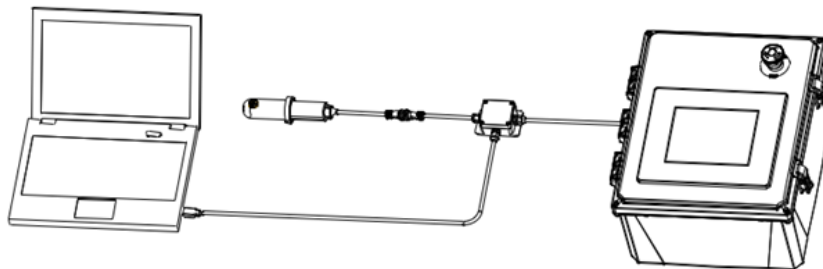


Figure 5. USB connection to ST-588 probe

5 Setup and Calibration with uPyxis® Mobile App

5.1 Download uPyxis® Mobile App

Download uPyxis® Mobile App from [Apple App Store](#) or [Google Play](#).



Figure 6.

5.2 Connecting to uPyxis® Mobile App

Turn on Bluetooth on your mobile phone (**Do not pair the phone Bluetooth to the ST-588 probe**). Open uPyxis® Mobile App. Once the app is open the app will start to search for the sensor. Once the uPyxis® Mobile App connects to the sensor, press the **ST-588 probe**.

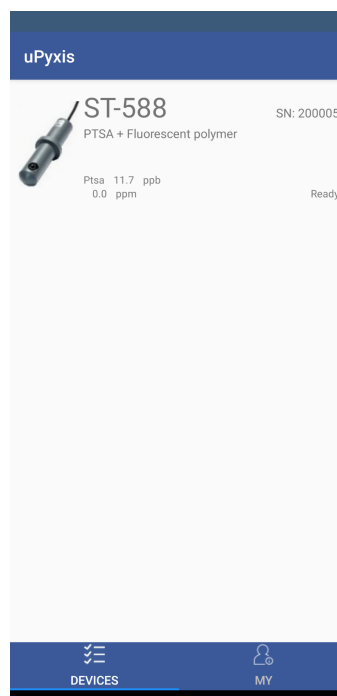


Figure 7.

5.3 Calibration Screen and Reading

When connected, the uPyxis® Mobile App will default to the **Calibration** screen. From the **Calibration** screen, you can perform calibrations by pressing on **Zero Calibration**, **Slope Calibration**, and **4–20mA Span** for either Fluorescent Polymer or PTSA, independently. Follow the screen instructions for each calibration step.

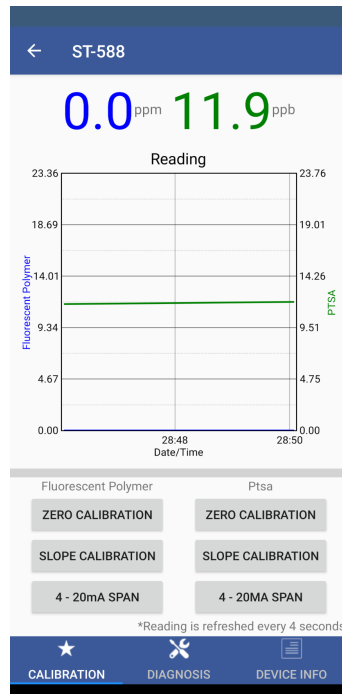


Figure 8.

5.4 Diagnosis Screen

From the **Diagnosis** screen, you can check the diagnosis condition. This feature may be used for technical support when communicating with service@pyxis-lab.com.

To perform a probe cleanliness check, first select the **Diagnosis Condition** which defines the fluid type that the ST-588 probe is currently measuring, then press **Cleanliness Check**. If the probe is clean, a **Clean** message will be shown. If the probe is severely fouled, a **Dirty** message will be shown. In this case, follow the procedure in the **Methods to Cleaning the ST-588** section of this manual.

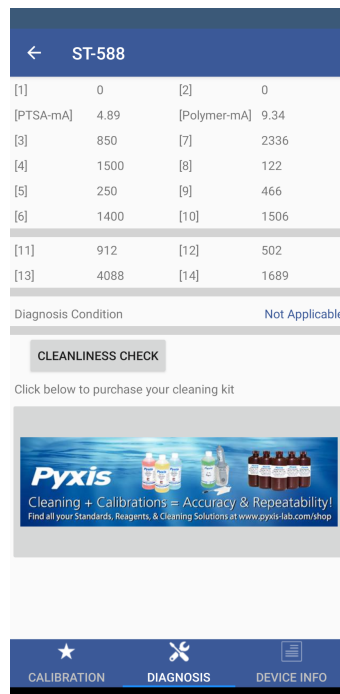


Figure 9.

5.5 Device Info Screen

From the **Device Info** screen. You can name the Device or Product as well as set the Modbus address.

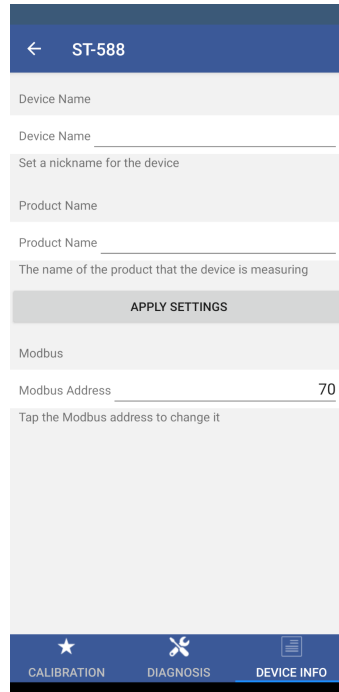


Figure 10.

6 Setup and Calibration with uPyxis® Desktop App

6.1 Install uPyxis® Desktop App

Download the latest version of **uPyxis®** Desktop software package from: <https://pyxis-lab.com/upyxis/> this setup package will download and install the Microsoft.Net Framework 4.5 (if not previously installed on the PC), the USB driver for the USB-Bluetooth adapter (MA-NEB), the USB-RS485 adapter (MA-485), and the main **uPyxis®** Desktop application. Double click the **uPyxis.Setup.exe** file to install.

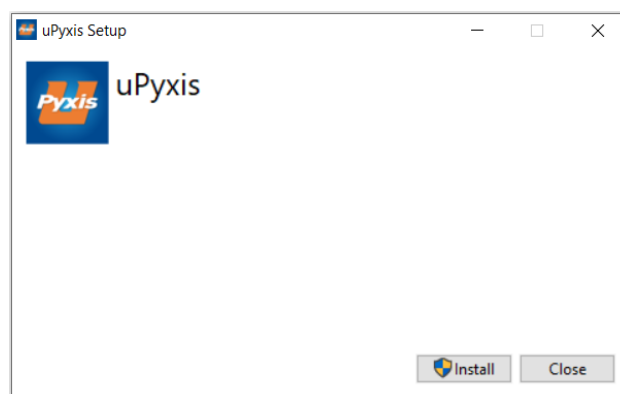


Figure 11.

Click **Install** to start the installation process. Follow the screen instructions to complete the USB driver and **uPyxis®** installation.

6.2 Connecting to uPyxis® Desktop App

When the uPyxis® Desktop App opens, click on **Device**, then click either **Connect via USB-Bluetooth** or **Connect via USB-RS485** depending on the connection type.

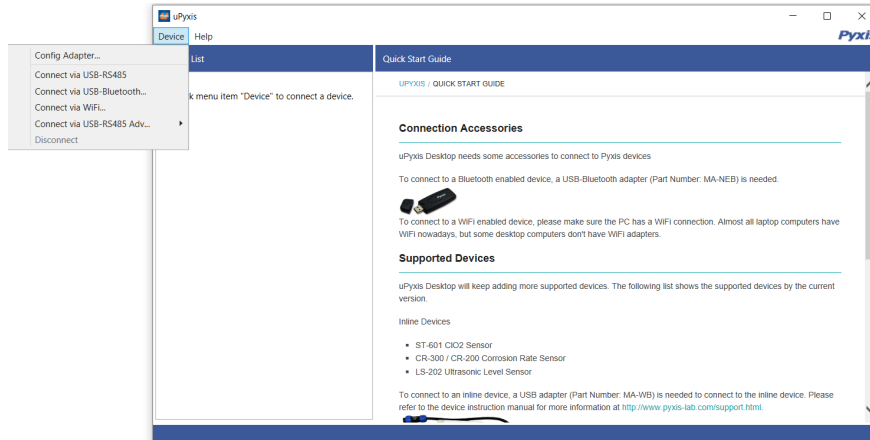


Figure 12.

6.3 Information Screen

Once connected to the device, a picture of the device will appear on the top left corner of the window and the uPyxis® Desktop App will default to the **Information** screen. On the **Information** screen you can set the information description for **Device Name**, **Product Name**, and **Modbus Address**, then click **Apply Settings** to save.

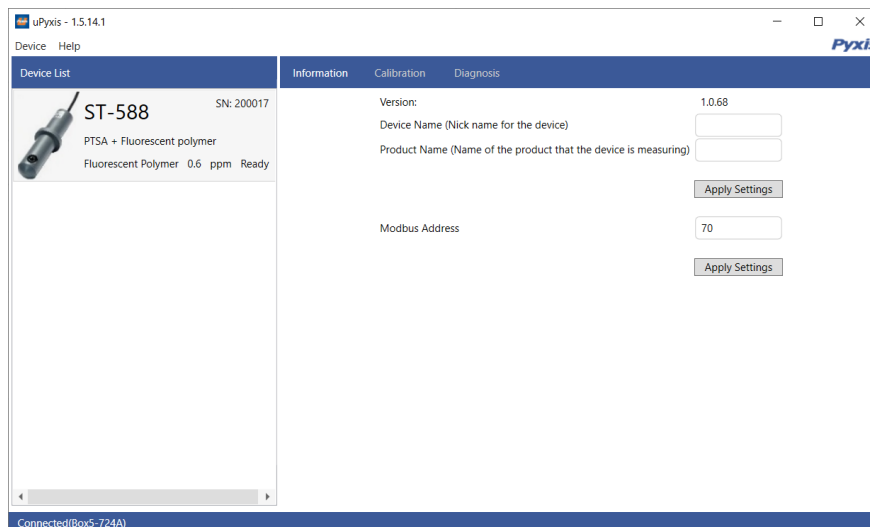


Figure 13.

6.4 Calibration Screen

To calibrate the device, click on **Calibration**. On the **Calibration** screen there are six calibration options:

- Fluorescent Polymer: **Zero Calibration**, **Slope Calibration**, and **4-20mA Span**
- PTSA: **Zero Calibration**, **Slope Calibration**, and **4-20mA Span**

The screen also displays the reading of the device. The reading refresh rate is every 4 seconds.

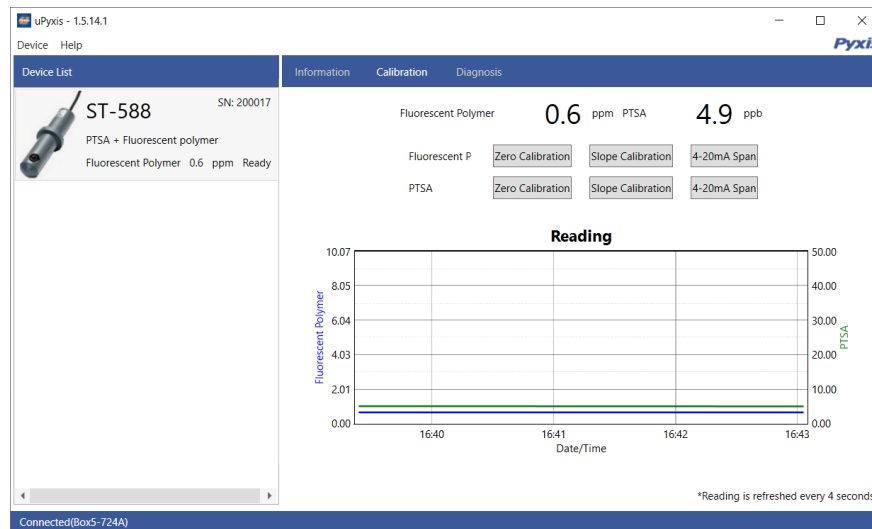


Figure 14.

6.5 Diagnosis Screen

After the device has been calibrated and installation has been completed, to check diagnosis, click on **Diagnosis**. When in the **Diagnosis** screen you can view the Diagnosis Condition of the device. This feature may be used for technical support when communicating with service@pyxis-lab.com. To perform a probe Cleanliness Check, first select the **Diagnosis Condition** which defines the fluid type that the ST-588 probe is currently measuring, then click **Cleanliness Check**. If the probe is clean, a **Clean** message will be shown. If the probe is fouled, a **Please Clean** message will be shown. In this case, follow the procedure in the **Methods to Cleaning the ST-588** section of this manual.

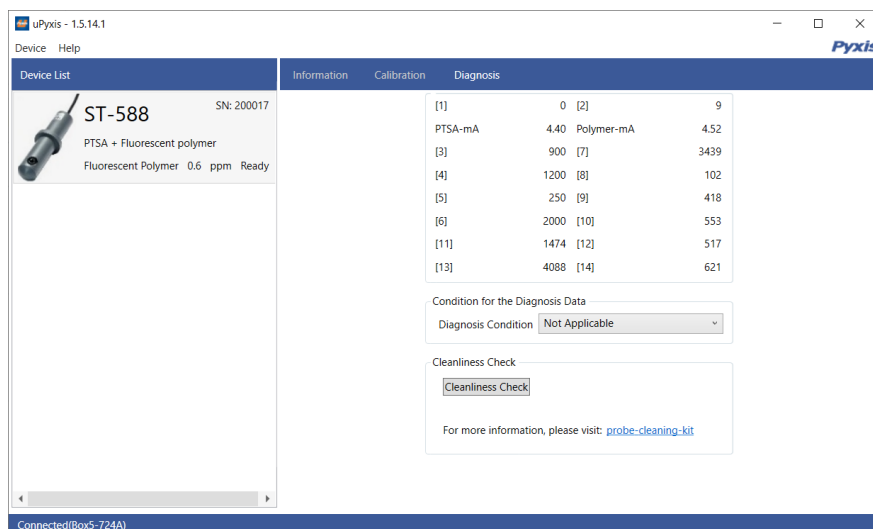


Figure 15.

7 Outputs

7.1 4–20mA Output Setup

The 4–20mA output of the ST-588 sensor is scaled as:

- Fluorescent Polymer:
 - 4 mA = 0 ppm
 - 20 mA = 20 ppm
- PTSA:
 - 4 mA = 0 ppb
 - 20 mA = 200 ppb

7.2 Communication using Modbus RTU

The ST-588 probe is configured as a Modbus slave device. In addition to the ppm Fluorescent Polymer and ppb PTSA values, many operational parameters, including warning and error messages, are available via a Modbus RTU connection. Contact Pyxis Lab Customer Service (service@pyxis-lab.com) for more information.

8 Sensor Maintenance and Precaution

The ST-588 probe is designed to provide reliable and continuous Fluorescent Polymer and PTSA readings even when installed in moderately contaminated industrial cooling waters. Although the optics are compensated for the effects of moderate fouling, heavy fouling will prevent the light from reaching the sensor, resulting in low readings and the potential for product overfeed if the ST-588 probe is used as part of an automated control system. When used to control product dosing, it is suggested that the automation system be configured to provide backup to limit potential product overfeed, for example by limiting pump size or duration, or by alarming if the pumping rate exceeds a desired maximum limit.

The ST-588 probe is designed to be easily removed, inspected, and cleaned if required. It is suggested that the ST-588 probe be checked for fouling and cleaned/calibrated on a monthly basis. Heavily contaminated waters may require more frequent cleanings. Cleaner water sources with less contamination may not require cleaning for several months. The need to clean the ST-588 probe can be determined by the **Cleanliness Check** using either the **uPyxis®** Mobile App (see the **Mobile Diagnosis Screen** section) or the **uPyxis®** Desktop App (see the **Desktop Diagnosis Screen** section).

8.1 Methods to Cleaning the ST-588

Any equipment in contact with industrial cooling systems is subject to many potential foulants and contaminants. Our inline probe cleaning solutions below have been shown to remove most common foulants and contaminants. A small, soft bristle brush, Q-Tips cotton swab, or soft cloth may be used to safely clean the probe housing and the quartz optical sensor channel. These components and more come with a Pyxis Lab **Inline Probe Cleaning Solution Kit** (P/N: SER-01) which can be purchased at our online Estore/Catalog <https://pyxis-lab.com/product/probe-cleaning-kit/>



Figure 16. Inline Probe Cleaning Solution Kit

To clean the ST-588 probe, soak the lower half of the probe in 100 mL inline probe cleaning solution for 10 minutes. Rinse the ST-588 probe with distilled water and then check for the flashing blue light inside the ST-588 probe quartz tube. If the surface is not entirely clean, continue to soak the ST-588 probe for an additional 10 minutes. Use the small, soft bristle brush and Q-Tips cotton swabs as necessary to remove any remaining contaminants in the ST-588 probe quartz tube.

8.2 Storage

Avoid long term storage at temperature over 100 °F. In an outdoor installation, properly shield the ST-588 probe from direct sunlight and precipitation.

9 Troubleshooting

If the ST-588 probe output signal is not stable and fluctuates significantly, make an additional ground connection — connect the clear (shield, earth ground) wire to a conductor that contacts the sample water electrically such as a metal pipe adjacent to the ST-588 tee.

Carry out routine calibration verification against a qualified Fluorescent Polymer and PTSA combined standard. After properly cleaning the ST-588 sensor, carry out the zero point calibration with distilled water and slope calibration using the qualified Fluorescent Polymer and PTSA combined standard.

10 Contact Us

Pyxis Lab, Inc

1729 Majestic Dr. Suite 5

Lafayette, CO 80026 USA

www.pyxis-lab.com

Phone: +1 (866) 203-8397

Email: service@pyxis-lab.com